

TRACKFISH 6500

CHARTPLOTTER and FISHFINDER

Installation and Operation Manual



NAVMAN

FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a normal installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.
- A shielded cable must be used when connecting a peripheral to the serial ports.

Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Contents

1 Introduction	7
1-1 Overview	8
1-2 Cleaning and maintenance	8
1-3 Plug-in cards	8
1-4 Removing and replacing the display unit	9
2 Basic Operation	10
2-1 Using the keys	10
2-2 Turning on and off / auto power	11
2-3 Backlight and night mode	12
2-4 Man overboard (MOB)	12
2-5 Alarms	13
2-6 Simulate mode	13
2-7 The main displays	14
3 Navigation: Chart	18
3-1 Introduction to navigating	18
3-2 Chart display	21
3-3 Distance and bearing calculator	23
3-4 Projected course	23
3-5 Tracks and tracking	24
4 Navigation: Highway display	24
5 Navigation: Waypoints	25
5-1 Waypoints display	25
5-2 Managing waypoints	26
6 Navigation: Routes	27
6-1 Routes display	27
6-2 Managing routes	28
7 Satellites	30
7-1 Satellite display	31

8 Sonar fishfinding: Introduction	31
8-1 Using the TRACKFISH	31
8-2 Interpreting the display.....	32
8-3 Single and Dual frequency fishfinding	34
8-4 Fish detection and display.....	37
8-5 Range	38
8-6 Gain and threshold.....	39
9 Sonar fishfinding: Displays	40
9-1 Sonar history display - no split	40
9-2 Sonar Zoom display	41
9-3 Sonar Bottom display.....	41
9-4 Sonar 50/200 display	42
9-5 Sonar A-Scope display	42
10 Gauges display	44
11 Data display	45
12 Fuel functions and display	46
12-1 When you add or remove fuel	46
12-2 Fuel display	47
12-3 Fuel consumption curves	48
13 Tides display	50
14 User card display	51
15 DSC/Buddy track displays	52
15-1 The displays	53
15-2 Using the displays	54
16 About display	55
17 Setting up the TRACKFISH	55
17-1 Setup > System	57
17-2 Setup > Chart	58
17-3 Setup > Sonar	61
17-4 Setup > GPS	62
17-5 Setup > Fuel	62

17-6 Setup > Track	64
17-7 Setup > Logs	65
17-8 Setup > Alarms	65
17-9 Setup > Units	66
17-10 Setup > Comms	67
17-11 Setup > Calibrate	68
17-12 Setup > Time	69
17-13 Setup > Favourites	69
17-14 Setup > Simulate	70
18 Installation	71
18-1 Installation: What comes with the TRACKFISH	71
18-2 Installation: Options and Accessories	71
18-3 Installation: The display unit	73
18-4 Installation: Power/data cable	74
18-5 Installation: GPS antenna	75
18-6 Installation: Sonar transducer	75
18-7 Installation: Navman petrol/gasoline sensors	76
18-8 Installation: Navman diesel sensors	76
18-9 Installation: DSC VHF radio	76
18-10 Installation: SmartCraft	77
18-11 Installation: Other NavBus instruments	77
18-12 Installation: Other NMEA instruments	78
18-13 Installation: Setup and test	78
Appendix A - Specifications	79
Appendix B - Troubleshooting	81
Appendix C - Glossary and navigation data	85

Important

It is the owner's sole responsibility to install and use the instrument in a manner that will not cause accidents, personal injury or property damage. The user of this product is solely responsible for observing safe boating practices.

Global Positioning System: The Global Positioning System (GPS) is operated by the US Government which is solely responsible for its operation, accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment anywhere in the world including the TRACKFISH. Whilst the Navman TRACKFISH is a precision navigation instrument, it can be misused or misinterpreted, which can result in its use being unsafe. To reduce the risk of misusing or misinterpreting the TRACKFISH, the user must read and understand all aspects of this Installation and Operation manual. We also suggest that the user practice all operations using the built in simulator before using the TRACKFISH at sea.

Electronic Chart: The electronic chart used by the TRACKFISH is an aid to navigation and is designed to supplement the use of official government charts not replace them. Only official government charts supplemented by notices to mariners contain the information required for safe and prudent navigation. Always supplement the information provided by the TRACKFISH with other plotting sources such as observations, depth soundings, radar and hand compass bearings. Should the information not agree then the discrepancy must be resolved before proceeding any further.

Sonar fishfinder: The accuracy of the sonar depth display can be limited by many factors, including the type of the transducers, the location of the transducers and water conditions. It is the user's responsibility to ensure the TRACKFISH transducers are installed and used correctly.

Fuel Computer: Fuel economy can alter drastically depending on the boat loading and sea conditions. The fuel computer should not be the sole source of information concerning available fuel onboard and the electronic information should be supplemented by visual or other checks of the fuel load. This is necessary due to possible operator induced errors such as forgetting to reset the fuel used when filling the tank, running the engine with the fuel computer not switched on or other operator controlled actions that may render the device inaccurate. Always ensure that adequate fuel is carried onboard for the intended trip plus a reserve to allow for unforeseen circumstances.

NAVMAN NZ LIMITED DISCLAIMS ALL LIABILITY FOR ANY USE OF THIS PRODUCT IN A WAY THAT MAY CAUSE ACCIDENTS, DAMAGE OR THAT MAY VIOLATE THE LAW.

Governing Language: This statement, any instruction manuals, user guides and other information relating to the product (Documentation) may be translated to, or has been translated from, another language (Translation). In the event of any conflict between any Translation of the Documentation, the English language version of the Documentation will be the official version of the Documentation.

This manual represents the TRACKFISH as at the time of printing. Navman NZ Limited reserves the right to make changes to specifications without notice.

Copyright © 2005 Navman NZ Limited, New Zealand, all rights reserved. Navman is a registered trademark of Navman NZ Limited.

The TRACKFISH is set up with default units of feet, °F (Fahrenheit), US gallons and knots. To change the units, see section 17-9.

1 Introduction

Quick reference to the built-in and optional features:

Feature	Type	See	Requires
General	How to use the keys and displays	2	
	Troubleshooting	Appendix B	
	Simulate mode	2-6	
	Glossary of special names	Appendix C	
	Specifications	Appendix A	
MOB	Man overboard key	2-4	
Navigation	Overview of how to navigate	3-1	GPS fix
	Finding the boat's position on the chart	3-2	
	Navigate to any point or to a waypoint	3-1	
	Navigate along a route	3-1	
	Projected course: An estimate of progress	3-4	
	Tracks: records of where the boat has been	3-5	
	GPS receiver status	7	
	Saving and loading data with a user card	14	User card
Chart data	Chart features (built in world chart)	3-2	
	Chart details	3-2-4 & 5	C-MAP™ chart
	Tides at a port	13	C-MAP™ chart
Alarms	Built in alarms	2-5	
	SmartCraft engine alarms	1-1	SmartCraft
Boat data	Data at top of main displays	2-7-3	
	Compass at top of main displays	2-7-4	
	Dedicated data display	11	
Fuel	Fuel computer, TRACKFISH petrol/gasoline engine	12	Fuel sensors
	Fuel computer, TRACKFISH diesel engine	12	Diesel sensors
	Fuel computer, SmartCraft engines	12	SmartCraft
	What to do when you add or remove fuel	12-1	
Sounder	Overview of the depth sounder	8	Sounder
	Depth, bottom features, water features	8	Sounder
	Fishfinder	8	Sounder
Other boats	Track your buddy, polling other boats	15	DSC VHF
	Distress calls	15	DSC VHF

1-1 Overview

The NAVMAN TRACKFISH 6500 is a compact, rugged, highly integrated marine chartplotter and fishfinder. It is easy to use and has an easy to read colour display. Complex functions can be performed with a few key presses, taking the hard work out of boating.

The available functions, displays and setup menus depend on the optional sensors and instruments that are installed:

- Sonar functions require a sonar transducer to be installed
- Fuel functions require one or more petrol/gasoline or diesel fuel sensors to be installed.
- SmartCraft engine functions require a SmartCraft system to be installed. For information on using SmartCraft, see the *SmartCraft Gateway Installation and Operation Manual*.

- DSC/Buddy track functions require a Navman DSC VHF radio with Buddy track support to be installed.
- The TRACKFISH can send data to other instruments, such as an autopilot, and receive data from other instruments.

For information on installing options, see section 18-2.

This manual describes how to install and operate the TRACKFISH. Special terms are explained in Appendix C. For maximum benefit, please read this manual carefully before installing and using the unit. For more information on this instrument and other Navman products, go to our website, www.navman.com.

1-2 Cleaning and maintenance

The TRACKFISH screen is covered by a proprietary anti-reflection coating. To avoid damage, clean the screen only with a damp cloth and mild detergent when dirty or covered in sea salt. Avoid abrasive cleaners, petrol or other solvents. If a plug-in card gets dirty or wet, clean it with a damp cloth or mild detergent.

Cover or remove a transom-mounted transducer when repainting the hull. If painting over a through hull transducer with antifouling

paint, use only one coat of paint. Remove the previous coat of antifouling paint by sanding it lightly.

To optimize performance, avoid walking on or jamming cables and connectors. Keep the transducer free of weed, paint and debris. Do not use a high pressure water blast on a speed sensor paddlewheel as it may damage the bearings.

Push the dust cover over the display when the TRACKFISH is turned off.

1-3 Plug-in cards

The TRACKFISH can use two kinds of plug-in card:

- **C-MAP™ chart cards** have chart details required for navigating in a particular region. When a chart card is plugged in, the extra details automatically appear on the TRACKFISH chart display.

The TRACKFISH can use NT, NT+ and NT-MAX cards. NT-MAX cards have much more chart information than earlier cards, including photos of points of interest.

- **C-MAP™ user cards** are used to store navigation data. Each user card expands the TRACKFISH memory and allows the data to be transferred to another TRACKFISH easily (see section 14).

Note: The older 5 volt user cards are not supported.


Changing the plug-in card

⚠ Warning: Handle plug-in cards carefully. Keep them in their protective cases when not plugged into the TRACKFISH.

⚠ Warning: Keep the holder in place in the TRACKFISH at all times to prevent moisture from entering the card compartment.



Gold contacts under here

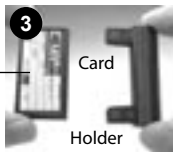

Turn the TRACKFISH off (see section 2-2).
Pull the card holder out of the TRACKFISH and pull any card out of holder.
Put the card in its case.

Push new card into holder. Ensure the gold contacts are on the outer edge and underneath (see above).
Keep the card's case.
Push card holder fully into TRACKFISH

1-4 Removing and replacing the display unit

If the display unit is bracket mounted then the display unit can easily be removed and replaced for security or protection.

Removing the display unit:

- 1 Turn the display unit off (see section 2-2) and put the dust cover on.
- 2 Loosen the knob on the mounting bracket and lift the unit off the bracket.
- 3 Unplug the connectors from the display unit; turning each locking collar anticlockwise until you can pull the plug out.
- 4 Push the attached dust covers over the exposed ends of the connectors.
- 5 Store the display unit in a dry clean place, such as the optional Navman carry bag.


Replacing the display unit

- 1 Remove the dust covers from the connectors. Plug the connectors into the back of the display unit:
 - Match the connector's colour to the socket colour.

- Insert each connector and turn the locking collar clockwise until it is finger tight.

Nothing will be damaged if a cable is plugged into the wrong socket by mistake.

- 2 Hold the display unit in place on the mounting bracket. Adjust the tilt of the display for best viewing, then hand tighten the knob on the mounting bracket. Remove the dust cover.

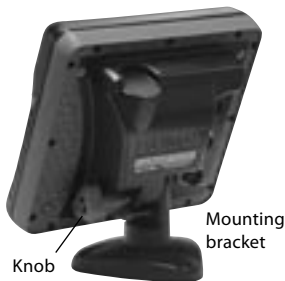

2 Basic Operation

Overview of the keys



In chart mode, centres chart at boat's position. Go back to an earlier menu or display.

Show a menu of the main displays. To go to a display, select it from the menu (see section 2-7).

Cursor keys, to move the cursor or the selection highlight.

Show a menu of the options for the current display. Press **MENU** again to display the Setup menu (see section 17).

Start an action or accept a change.

Chart display: Zoom in or out to display different areas and detail on the chart.

Sonar display: Change the depth range displayed.

Switch the display to the next in the favourites list (see section 2-7-2)

Man overboard (MOB, see section 2-4).

Turn TRACKFISH on and off (see section 2-2); adjust the backlighting (see section 2-3).

2-1 Using the keys

In this manual:

Press means to push the key for less than a second.

Hold means to hold the key down.

The internal beeper beeps when a key is pressed (to disable or enable the beep, see section 17-1).

Using the menus

Operate the TRACKFISH by selecting items from menus. Items can be submenus, commands or data.

Selecting a submenu

A **▶** after a menu item indicates a submenu, for example Chart **▶**. Press **▲** or **▼** to move the highlight to the submenu, then press **ENT**.

Starting a command

Press **▲** or **▼** to move the highlight to the command, for example Goto cursor, then press **ENT**.

Changing data

First press **▲** or **▼** to move the highlight to the data to change, then:

a To change a tick box

means On or Yes

means Off or No.

Press **ENT** or **↵** to change the tick box.

b To select an option

 
1 Press **ENT** to display the menu of options.



2 Press **▲** or **▼** to move the highlight to the option you want, then press **ENT**.

c To change a name or number:

1 Press **ENT** to display the name or number:




2 Press **←** or **→** to select a letter or digit to change. Press **▲** or **▼** to change the letter or digit.

Repeat this to change other letters or numbers.

3 Press **ENT** to accept the new value. Or press **ESC** to ignore the changes.

d To change a slider value

 Press **←** to decrease the value or **→** to increase the value.



2-2 Turning on and off / auto power

Turning on manually

If the TRACKFISH is not wired for auto power, press **U** to turn the unit on. If necessary, adjust the display to be easy to read (see section 2-3).

Note: If the TRACKFISH is not wired for auto power then the TRACKFISH does not record engine hours and might not record fuel consumption (see section 18-4).

Turning off manually


If the TRACKFISH is not wired for auto power or if the ignition switch is off, hold down **U** until the display turns off.

Auto power




If the TRACKFISH is wired for auto power (see section 18-4), then:


- The TRACKFISH automatically turns on when you turn the boat's ignition switch on.
- You can not turn the TRACKFISH off while the ignition switch is on.
- If Auto power off (see section 17-1) is , the TRACKFISH automatically turns off when you turn the boat's ignition switch off.
- If Auto power off (see section 17-1) is , the TRACKFISH stays on when you turn the boat's ignition switch off. You can now turn the TRACKFISH off manually.



2-3 Backlight and night mode

To go to the Backlight display, press  briefly.

Backlight

The display and keys are backlit. To change the backlight level, highlight  select Backlight, then press  to dim or  to brighten.



When you have finished, press .

 **Tip:** Press  twice to give the brightest screen, with maximum backlight and Night mode off.

Night mode


Night mode sets the palette for all displays.

- Normal palette, for daytime
- A palette optimised for night time.

To change mode, highlight Night mode, then press  or . To change only the chart palette, see section 17-2.

2-4 Man overboard (MOB)

The MOB feature saves the boat's position and then navigates back to this point.

 **Warning: MOB will not work if the TRACKFISH does not have a GPS fix.**

1 Press .

The TRACKFISH stores the boat's position as a waypoint called MOB.

2 The TRACKFISH changes to the chart display, with the MOB waypoint at the centre of the chart.

The chart zooms in for accurate navigation. If the chart can not show the required small scale, the TRACKFISH changes to plotter mode (a white display with crosshatching and no chart details, see section 17-2).

3 The TRACKFISH sets the MOB waypoint to be the destination to navigate to.

If the NMEA output (autopilot) is off (see section 17-10) use the TRACKFISH to manually navigate to the destination MOB waypoint (see sections 3-1-1 and 3-1-2).

If the NMEA output (autopilot) is on, the TRACKFISH asks if the autopilot is active.

Select:

No: Use the TRACKFISH to manually navigate to the destination MOB waypoint (see sections 3-1-1 and 3-1-2).

Yes: The TRACKFISH asks if the boat is to go to the MOB waypoint.


 
Select:


Yes: to immediately start navigating to the MOB waypoint.

 **Warning: This might result in a sudden and dangerous turn.**

No: disengage the autopilot; then use the TRACKFISH to manually navigate to the destination MOB waypoint (see sections 3-1-1 and 3-1-2).


To cancel MOB or set another MOB

- 1 Press  again to display a menu.
- 2 Select  an option from the menu.

 **Tip:** The MOB waypoint remains on the chart after the MOB has been cancelled. To delete the MOB waypoint, see section 5-2-5.

2-5 Alarms

When the TRACKFISH detects an alarm condition, it displays a warning message on the display, the internal beeper sounds and any external beepers or lights operate.

Press  to clear the alarm. The alarm will sound again if the alarm condition occurs again.

The TRACKFISH has user settable alarms (see section 17-8).

2-6 Simulate mode

In Simulate mode, the TRACKFISH ignores data from the GPS antenna and other transducers and sensors and the TRACKFISH generates this data itself. Otherwise, the TRACKFISH functions normally.

There are two simulate modes:

- Normal: Allows a user to become familiar with the TRACKFISH off the water.
- Demo: Simulates a boat moving along a route and automatically displays different TRACKFISH functions.

To start and stop Simulate mode, and for more information, see section 17-14. In simulate mode, Simulate or Demo flashes at the bottom of the display.


 **Warning: Never have Simulate mode on when the TRACKFISH is navigating on the water.**

2-7 The main displays

To go to a display, press **DISP**, press **←** or **→** to select the type of display to show, press **▲** or **▼** to select the display from the list, then press **ENT**.

The available displays depend on the optional sensors and instruments that are installed (see section 1-1).


Chart menu and displays

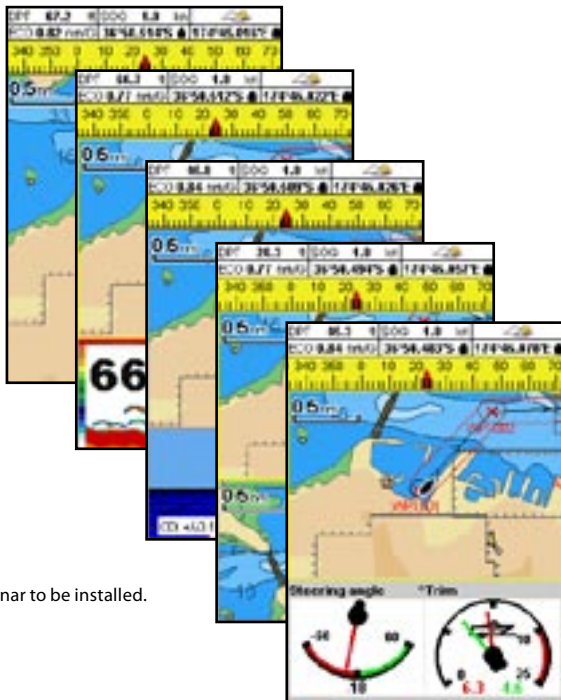

Note

The sonar displays require sonar to be installed.

Sonar menu and displays

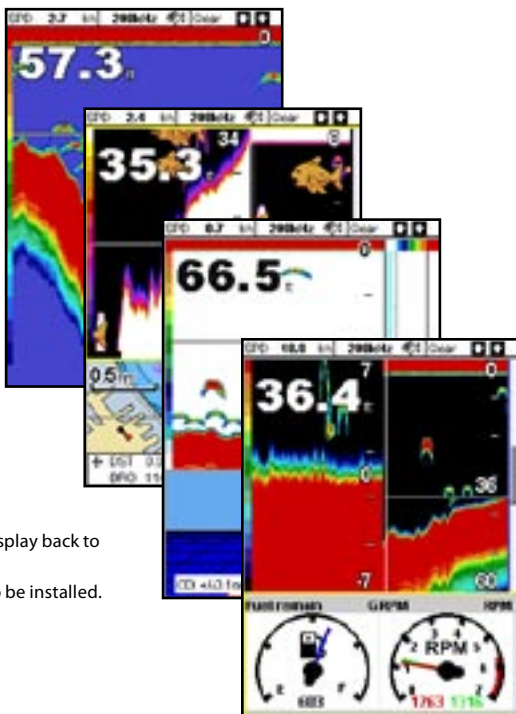

Note

Press **[ESC]** to go from an Other display back to your last chart or sonar display.

The sonar displays require sonar to be installed.


SmartCraft menu and displays

The SmartCraft displays require a SmartCraft system to be installed. For information on using SmartCraft, see the *SmartCraft Gateway Installation and Operation Manual*.

Note

Press **[ESC]** to go from a SmartCraft display back to your last chart or sonar display.

Other menu and displays

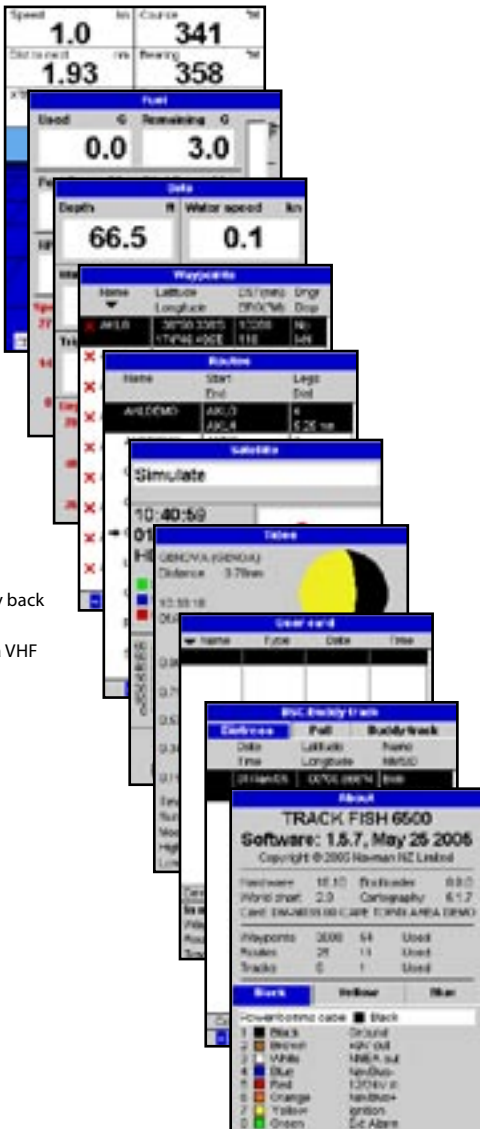

Note

Press **ESC** to go from an Other display back to your last chart or sonar display.

The DSC/Buddy track display requires a VHF radio to be installed.

2-7-1 Dual displays

The TRACKFISH can show two displays at once, for example Chart + Gauges. One of the displays, called the active display, has a yellow border and is controlled by the user (Highway can not be the active display). To change the active display, press **DISP** twice. For example:


- If Chart is the active display: press **MENU** to display the options for Chart; press **DISP** twice to make Gauges the active display.

- If Gauges is the active display: press **MENU** to display the options for Gauges; press **DISP** twice to make Chart the active display.

Note: Split ratio of chart or sonar and gauges can not be changed.

To adjust the relative sizes of the two displays:


- 1 Press **MENU** and select Split ratio.
- 2 Press **▲** or **▼** to adjust the sizes, then press **ENT**.

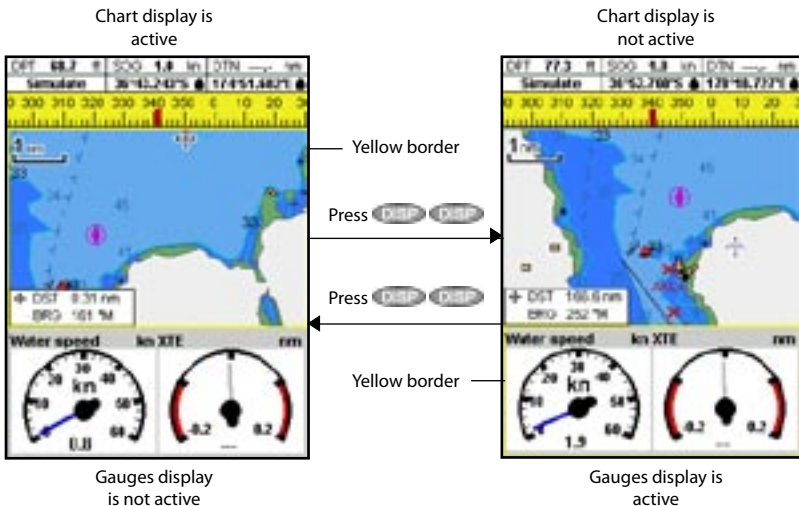

2-7-2 Favourite displays


The TRACKFISH has a list of commonly used displays, called favourite displays. There can be up to six favourite displays and three can be set by the user (see section 17-13).

To change the display to the next favourite, press **PAGE**. For example, with four favourites:

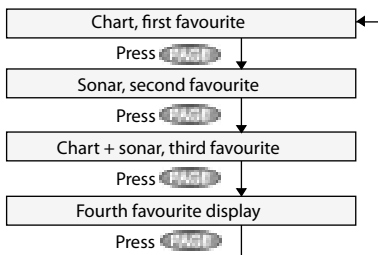

2-7-3 Data header

The chart, sonar and highway displays can show data at the top of the display.

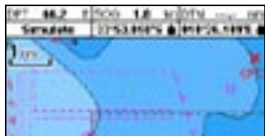

The data header for each display can be different. To change the data header for a display:

- 1 Go to the display, press **MENU** and select Data header.
- 2 To turn the data header off or on:
 - i Select Data.
 - ii Select or .
- 3 To choose the size of the data:
 - i Select Size.
 - ii Select Small, Medium or Large.

- 4 To change the data displayed:
 - i Select Data setup.
 - ii Change a data field:
 - a Press the cursor keys to highlight the field.
 - b Press **ENT** to display a menu of data items.
 - c Select a data item that is available on your system or select None to leave the field empty.
 - iii Repeat the above step to set the other data fields.
- Tip:** If all fields in a line are None then the line will not be displayed and the data header will take less space on the display.
- 5 Press **ESC** to return to the display.

2-7-4 Compass

The chart, sonar and highway displays can show a compass at the top of the display.

The compass always shows the boat's course over ground (COG), a red symbol in the middle. When the boat is navigating to a point, the compass also shows bearing to the destination (BRG), a black symbol.

In this example, BRG is [###]° and COG is [###]°.

To turn the compass off or on:

- 1 Press **MENU** and select Data header.
- 2 Set Compass to or .



3 Navigation: Chart


The chart display shows the chart, the boat's position course and navigation data.


3-1 Introduction to navigating

The TRACKFISH has two ways of navigating, going straight to a point or following a route.

3-1-1 Navigating to a point

When the TRACKFISH is navigating to a point, the chart and highway displays show navigation data:

- A The boat position 
- B The destination point marked with a circle.
- C The boat's plotted course to the destination.
- D Two CDI lines, parallel to the boat's plotted course, which indicate the maximum expected deviation from the plotted course.

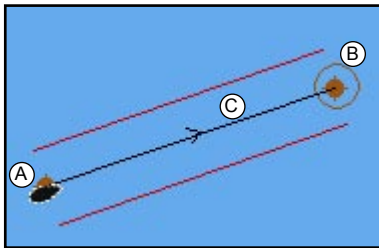

For more information, see appendix C.

If the TRACKFISH is connected to an autopilot, the TRACKFISH will send data to the autopilot to steer the boat to the destination. Start the autopilot before starting to navigate to the point.

If the TRACKFISH has no autopilot, steer the boat manually:

- a use the boat position and destination on the chart or highway displays
- b or use navigation data displayed on the data header (see section 2-7-3)
- c or use COG and BRG on the compass (see section 2-7-4).



3-1-2 Going to a waypoint or to a point on the chart

A waypoint is a position that you can set on the TRACKFISH chart, for example a fishing spot or a point on a route (see section 5).

Going to a waypoint from the chart display

- 1 Go to the chart display.
- 2 Move the cursor to the waypoint: either use the cursor keys or use Find (see section 3-2-5).
- 3 Press **MENU** and select **Goto**.

Going to a waypoint from the waypoints display

- 1 Go to the waypoints display.
- 2 Press  or  to highlight the waypoint to go to.
- 3 Press **MENU** and select **Goto**.

Going to a point on the chart

- 1 Switch to a chart display.

Note:

- 1 If the XTE alarm is enabled, an alarm will sound if the boat deviates too much from its intended course (see section 17-8).
- 2 If the arrival radius alarm is enabled, then an alarm will sound to show that the boat has reached the destination (see section 17-8).

- 2 Move the cursor to the destination point: either use the cursor keys or use Find (see section 3-2-5).
- 3 Press **MENU** and select **Goto** cursor.


Warning: Make sure the course does not pass over land or dangerous waters.

Navigating

The TRACKFISH navigates to the point as described in section 3-1-1.

Cancelling navigating

Go to a Chart display, press **MENU** and select **Cancel goto**.

 **Tip:** Before starting, create waypoints at points of interest. Create a waypoint at the start of the trip for you to navigate back to (see section 5-2-1).

3-1-3 Following a route

Preparing

A route is a list of waypoints that the boat can follow (see section 6).

- To create waypoints before creating the route, see section 5-2-1.
- To create a route, see section 6-2-1.

Starting a route from the chart display:

- 1 Go to the chart display.
- 2 Press MENU and select Start Route
- 3 Press UP or DOWN to highlight the route to follow. Press ENT.
- 4 The TRACKFISH asks for the direction to traverse the route.
Select Forward (the order the route was created) or Reverse.
- 5 The TRACKFISH displays the chart with the route marked and starts navigating from the start of the route.

Starting a route from the routes display:

- 1 Go to the routes display.
- 2 Then follow step 3 as in **starting a route from the chart display** above.


Navigating


The TRACKFISH navigates to each waypoint on the route in turn as described in section 3-1-1.

The TRACKFISH stops navigating to the waypoint at the end of the current leg and starts the next leg of the route:


- a when the boat comes within 0.025 nm of the waypoint
- b or when the boat passes the waypoint
- c or if you skip the waypoint.

Skipping a waypoint

To skip a waypoint, go to a chart display, press  and select Skip. The TRACKFISH starts navigating straight towards the next waypoint on the route.

 **Warning: Skipping a waypoint with the autopilot on might result in a sudden course change.**

Cancelling a route


When the boat has reached the final waypoint, or to stop the boat following the route at any time, cancel the route. Go to a chart display, press  and select Cancel route.

3-2 Chart display

To go to the Chart display:

- either press **PAGE** one or more times until the chart is displayed
- or press **DISP**, select **Chart**, then select **Chart**.

A typical chart display shows:

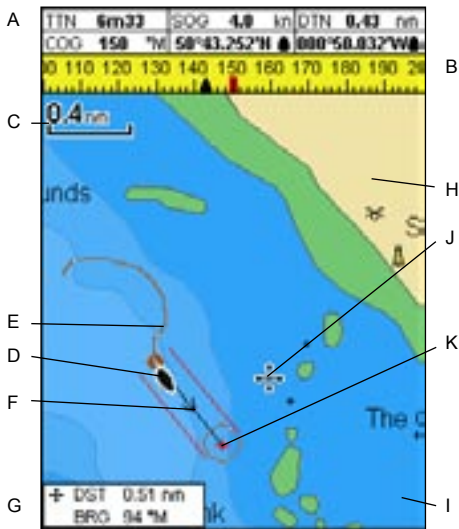

A Data header. To turn the data off or on or to change what data is displayed (see section 2-7-3)

B Compass (see section 2-7-4)

C Chart scale (see section 3-2-3)

D Boat position (see section 3-2-1)

E Boat track (see section 3-5)

F Boat course and CDI lines (see Appendix C, CDI). The boat is going to the waypoint called FISH6

G Distance and bearing of cursor from boat

H Land

I Sea

J The cursor (see section 3-2-1)

K A typical waypoint (see section 5)

Note:


To change the types of information displayed on the chart, see section 17-2.

To change to a perspective view of the chart, see section 3-2-6.

3-2-1 Chart modes

The Chart has two modes:

Centre on boat mode

To switch to centre on boat mode in the chart display, press **ESC**. The boat  is at the centre of the chart. As the boat moves through the water, the chart automatically scrolls to keep the boat in the centre of the chart. The cursor (see below) is turned off.

Cursor mode

The keys **▲**, **▼**, **◀** and **▶** are called cursor keys. To switch to cursor mode in the chart display, hold down a cursor key. The cursor **+** appears and moves away from the boat:

- Press the key which points in the direction that the cursor will move, for example press **▼** to move the cursor down.
- Press midway between two of the cursor keys to make the cursor move diagonally.
- Hold a cursor key down to make the cursor move continuously across the display.


In Cursor mode:

- The distance (**+DST**) and bearing (**+BRG**) of the cursor from the boat are displayed at the bottom corner of the display.
- The chart does not scroll as the boat moves.
- If the cursor reaches the edge of the display, the chart will scroll.

For example, hold down **▶** to move the cursor to the right side of the display and the chart will scroll to the left.

3-2-2 Latitude and longitude

Latitude and longitude can be displayed in the data header. The display is degrees and minutes to three decimal places, about 2 m (6 ft) resolution. Normally the position is the boat's position, and the latitude and longitude has a boat symbol to show this:

 36° 29.637' N or S Latitude

 175° 09.165' E or W Longitude

If the cursor has been moved in the last ten seconds, then the position is the cursor's position, and the latitude and longitude has a cursor symbol to show this:

+ 36° 29.841' N or S Latitude

+ 175° 09.012' E or W Longitude

⚠ Warning: When reading the boat position, make sure the position is not the cursor position.

3-2-3 Chart scale

Press **+** to zoom in and display a smaller area of the chart in more detail. Press **-** to zoom out and display a bigger area in less detail.

The chart scale is displayed at the top left of the chart:



3-2-4 Chart symbols and information

The chart shows many kinds of symbols, such as waypoints, ports, marinas, buoys and beacons. If necessary, press **+** or **-** to choose a chart scale where the symbol is displayed.

To see stored information about a symbol:

- 1 Either move the cursor to the symbol on the chart and wait two seconds or use Find to move the cursor to a symbol for a port or service (see section 3-2-5).
- 2 A window appears at the bottom of the display with some information about the symbol.
- 3 To see more detail about a symbol or a list of associated items for the symbol, press **ENT**:
 - i Select an item to display. If there are more items than will fit on the display, press **▲** or **▼** to scroll up or down. Select a camera icon to display a photo of the item. If the photo is too big to fit on the display, press **◀**, **▶**, **▲** or **▼** to scroll the photo. Select Tide Height Station to display a tide chart for the position (see section 13).
 - ii Select other items or press **ESC** to return to the chart.

To see stored information about nearby symbols press **INFO** and select Chart info. Then follow step 3 above.

3-2-5 Finding a chart symbol

To find and display a chart symbol:

- 1 Press **MENU** and select **Find**.
- 2 Select the type of symbol: Waypoints, Routes, Ports by name, Ports & services, or Tide stations.
- 3 For Ports & services: select the type of service to find.
For Ports by name: press **←**, **→**, **▲** or **▼** to enter a name or letters contained in the port name, then press **ENT**.
- 4 A list of items is displayed. If there are more items than will fit on the display, press **→** or **←** to page up and down.

For Ports by name: to search for a different port name, press **ESC**. change the name, then press **ENT**.

- 5 Select the item and press **ENT**. The chart display changes to show the item in the middle of the display.

To see stored information about the item, press **ENT** (see section 3-2-4).

3-2-6 Perspective view

Perspective view shows the chart from an angle instead of from straight above. To turn perspective view on or off, press **MENU** and set **Perspective** to or .

3-3 Distance and bearing calculator

The distance and bearing calculator can plot a course of one or several legs and show the bearing and length of each leg, as well as the total distance along the course. The completed course can be converted into a route.

To use the distance and bearing calculator:


- 1 Press **ESC** until the chart display is displayed. Press **MENU** and select **Distance**.
- 2 Move the cursor to the start of the first leg. It does not matter if this point is a waypoint or not. Press **ENT**.
- 3 To add a leg to the course, move the cursor to the end of the leg. It does not matter if this point is a waypoint or not. The display shows the bearing and length of the leg, as well as the total distance along the course. Press **ENT**.

- 4 To remove the last leg from the course, press **MENU** and select **Remove**.
- 5 Repeat the above two steps to enter the whole course.
- 6 To save the new course as a route, press **MENU** and select **Save**. This also saves any new points on the course as new waypoints, with default names. If necessary, edit the route later (see section 6-2-2) and edit any new waypoints later (see section 5-2-3).
- 7 Finally, press **ESC** to return to the chart display.

3-4 Projected course

If Projected course is turned on, then the TRACKFISH will display the projected position based on the course over ground (COG), speed and a specified time. To turn Projected course on and off and to set the time, see section 17-2.

- A Projected position
- B Boat's projected course
- C Boat position

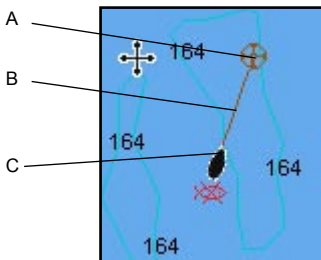

3-5 Tracks and tracking

Tracking records the boat's position to memory at regular intervals, which can be:

- Time intervals.
- Or distance intervals.

The track of where the boat has been can be displayed on the chart. The TRACKFISH can display one track while recording another.

To work with tracks, see section 17-6.

The TRACKFISH can store five tracks:

- Track 1 can hold up to 2000 points and is intended to record the normal progress of the boat.
- Tracks 2, 3, 4 and 5 can hold up to 500 points each and are intended to record sections to be retraced accurately, for example entering a river mouth.

Tip: Record the tracks in good conditions.

When recording is on and the track becomes full then recording continues and the oldest points in the track are deleted. The maximum length of a track depends on the selected track interval: a small interval will give a shorter, more detailed track and a long interval will give a longer, less detailed track, as shown in these examples:

Time intervals


Interval	Track 1	Track 2, 3, 4 or 5
1 sec	33 minutes	8 minutes
10 sec	5.5 hours	1.4 hours
1 min	33 hours	8 hours

Distance intervals

Interval	Track 1	Track 2, 3, 4 or 5
0.01	20	5
1	2,000	500
10	20,000	5,000

The track lengths are in the current distance units, for example nm.

4 Navigation: Highway display

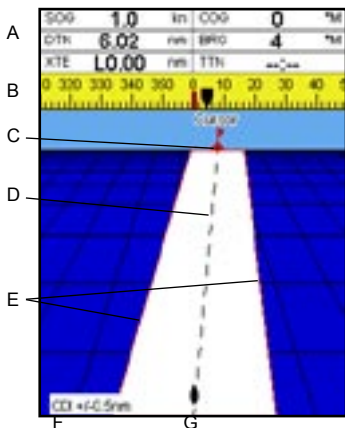

The highway display has a bird's eye view of the boat's course to a destination:

To go to the Highway display, press **DISP**, select **Other**, then select **Highway**.

The highway display shows:

- A Optional data header (see section 2-7-3)
- B Optional compass (see section 2-7-4)
- C Destination waypoint
- D Boat's plotted course to destination
- E CDI lines, parallel to the boat's plotted course (see Appendix C, CDI). The CDI lines are like a highway over the water where the boat will move.
- F CDI scale
- G The boat position is at the bottom, centre of the display

Warning: The highway display does not show land, dangerous waters or chart symbols.

5 Navigation: Waypoints

A waypoint is a position that you can set on the TRACKFISH chart, for example a fishing spot or a point on a route. The TRACKFISH can have up to 3000 waypoints. A waypoint can be created, changed or deleted.



A waypoint has:

- A name (up to eight characters).
- An icon showing what kind of waypoint it is. The available icons are:



- A position.
- A colour for the waypoint symbol and name on the chart.
- A type:

Normal: A normal waypoint can be navigated to or included in a route.

Danger: A danger waypoint is a point to avoid. If the boat comes within the danger radius of a danger waypoint the unit can sound an alarm (see section 17-8).

- A display option:

Controls how the waypoint is displayed on the chart (see section 17-2):

5-1 Waypoints display

To go to the waypoints display, press **DISP**, select **Other**, then select **Waypoints**.

The waypoints display is a list of the waypoints that have been entered, each with waypoint symbol, name, latitude and longitude, distance and bearing from the boat, type and display option.

If there are more waypoints than will fit on the display, press **UP** or **DOWN** to scroll up or down a page at a time.

Name	Latitude	Longitude	DST (nm)	Degr BRG (T)	Degr Disp
AKL0	36°50.3395'S	174°46.495'E	10280	118	I-N
AKL1	36°49.945'S	174°49.021'E	10282	118	I-N
AKL2	36°49.079'S	174°49.696'E	10282	118	I-N
AKL3	36°47.849'S	174°49.200'E	10282	118	I-N
AKL4	36°46.974'S	174°49.081'E	10281	118	I-N
AMS0	52°19.1807'N	007°18.548'E	539.4	353	I-N
AMS1	52°19.762'N	007°14.141'E	540.3	353	I-N
AMS2	52°19.927'N	007°10.720'E	540.7	353	I-N
AMS3	52°19.927'N	007°07.868'E	541.0	352	I-N

5-2 Managing waypoints

⚠ Warning: Do not create a navigation waypoint on land or in dangerous water.

5-2-1 Creating a new waypoint

Creating and editing a new waypoint from the chart display

- 1 To create a waypoint at the boat position, press **ESC** to switch the chart to centre on boat mode.
Or, to create a waypoint at a different point, move the cursor to that point on the chart.
- 2 Press **ENT**.
- 3 A new waypoint, with the default name and data is created.
- 4 Change the waypoint data if necessary (see section 5-2-7).

Creating a new waypoint from the waypoints display

- 1 In the waypoints display, press **MENU** and select **Create**.
- 2 A new waypoint, with a default name and data, is created at the boat position.
- 3 Change the waypoint data if necessary (see section 5-2-7).

Note: Waypoints can also be created when a route is created (see section 6-2-1).

5-2-2 Moving a waypoint

Moving a waypoint from the chart display

- 1 In the chart display, move the cursor to the waypoint to move.
- 2 Press **MENU** and select **Move**.
- 3 Move the cursor to the new position and press **ENT**.

Moving a waypoint from the waypoints display

To move a waypoint from the waypoints display, edit the waypoint (see section 5-2-3) and change the latitude and longitude.

5-2-3 Editing a waypoint

Editing a waypoint from the chart display

- 1 In the chart display, move the cursor to the waypoint to edit.

- 2 When the waypoint data is displayed, press **ENT**.
- 3 Change the waypoint data (see section 5-2-7).

Editing a waypoint from the waypoints display

- 1 In the waypoints display, press **▲** or **▼** to highlight the waypoint to edit. Press **MENU** and select **Edit**.
- 2 Change the waypoint data (see section 5-2-7).

5-2-4 Displaying a waypoint on the chart

This goes to the chart display, and shows the selected waypoint at the centre of the display.

- 1 In the waypoints display, press **▲** or **▼** to highlight the waypoint to display. Press **MENU** and select **Display**.
Or, in the Chart display, press **MENU**, select **Find**, then select **Waypoints**. Select a waypoint from the list.
- 2 The TRACKFISH switches to the chart display, with the selected waypoint at the centre of the chart.

5-2-5 Deleting a waypoint

A waypoint can not be deleted if the boat is navigating to it or if the waypoint is used in more than one route. A waypoint that is used in one route can be deleted.

⚠ Warning when a waypoint is deleted from a route, check that the changed route does not cross land or dangerous waters.

Deleting a waypoint from the chart display

- 1 In the chart display, move the cursor to the waypoint to delete.
- 2 Press **MENU** and select **Delete**.
- 3 Select **Yes** to confirm.

Deleting a waypoint from the waypoints display

- 1 In the waypoints display, press **▲** or **▼** to highlight the waypoint to delete. Press **MENU** and select **Delete**.
- 2 Select **Yes** to confirm.

5-2-6 Deleting all waypoints

- 1 In the waypoints display and press **MENU** and select **Delete all**.
- 2 Select **Yes** to confirm.

5-2-7 Changing a waypoint's data

To change the waypoint data when it is displayed in a window:

- 1 Select the data to change.
Press **ENT**.
Use the cursor keys to change the data.
Press **ENT**.
- 2 If necessary, repeat the above step to change other data.
- 3 Select **Save**.

5-2-8 Sort Waypoints

To change how the waypoints list is displayed:

- 1 Press **MENU** and select **Sort by**.
- 2 Select how to display the list:
Name: In alphabetical order by name.
Icon: Grouped by icon type.
Distance: In order of distance from the boat.

An arrow at the top of a column indicates how the waypoints are sorted.

5-2-9 Navigating to a waypoint

See section 3-1-2.

6 Navigation: Routes

A route is a list of waypoints that the boat can navigate along. Routes can be created, changed and deleted.

The TRACKFISH can have up to 25 routes. Each route can have up to 50 waypoints.

A route can:

- Start and stop at the same waypoint.
- Include waypoints more than once.

The TRACKFISH can navigate along a route in either direction. Waypoints on the route can be skipped.

Routes are a powerful feature when the TRACKFISH is connected to an autopilot, allowing the vessel to be automatically guided along the route.

⚠ Warning: Make sure that routes do not cross land or dangerous water.

6-1 Routes display

The routes display is a list of the routes that have been entered, each with route name, start waypoint, end waypoint, number of legs and total distance.

To go to the routes display, press **DISP**, select **Other**, then select **Routes**.

If there are more routes than will fit on the display, press **↑** or **↓** to scroll up or down a page at a time.

Name	Start	End	Legs	Dist
ALLZERO	ALL0	ALL0	4	0.25 nm
ARUNDR	AR00	AR00	2	0
AR00	AR00	AR00	4	0.45 nm
CALDER	CAL0	CAL0	4	0.22 nm
OFFDND	OFF0	OFF0	4	0
OFF0	OFF0	OFF0	11	1.1 nm
OCALDER	OCAL	OCAL	4	0
OCAL0	OCAL	OCAL	4	0.03 nm
UREDR	URE0	URE0	4	0
URE0	URE0	URE0	4	0.06 nm
OSLDR	OSL0	OSL0	5	0
OSL0	OSL0	OSL0	5	0.05 nm
RAURD	RAUR0	RAUR0	2	0
RAUR0	RAUR0	RAUR0	2	1.04 nm
SLDR	SL0	SL0	5	0
SL0	SL0	SL0	5	0.03 nm

6-2 Managing routes

Warning: After creating or changing a route, display the route on the chart and check that it does not cross land or dangerous water.

6-2-1 Creating a new route

A. Creating a new route from the chart display

While creating the route:

- Press **+** or **-** to change the range; scroll the chart by moving the cursor to the edge of the chart.
- A data box at the bottom left of the display shows the route name and total distance. If the cursor is near a leg, it shows the length and bearing of the leg as well.
- The legs of a route must start and end at waypoints. If a leg does not start or end at an existing waypoint then a new waypoint will be created automatically (to change the new waypoint data, see section 5-2-7).
- You can not use a Danger waypoint in a route.

- 1 In the chart display, press **MENU** and select **New route**.
- 2 The route is given a default name:
 - i Change the name if necessary.
 - ii Select **Ok**.
- 3 To enter the legs of the route:
 - i Move the cursor to the start of the route and press **ENT**.
 - ii A waypoint is created with a default name. to save this waypoint press enter, to edit the waypoint refer to 5-2-7
 - iii Press **ENT** a dotted leg line is displayed from the cursor to the previous waypoint
 - iv Move the cursor to the end of the first leg and press **ENT**.
 - v Repeat i to iv until the last waypoint in the route is placed and saved
 - vi Press **ESC** to complete the route

Menu options while creating a route:

- 1 To add a waypoint to the route
 - i Press **MENU** and select **Add**.

- 2 To insert a waypoint in the route by breaking one leg into two:
 - i Move the cursor to the leg you want to break.
 - ii Press **MENU** and select **Insert**.
 - iii Move the cursor to where the new route waypoint will be.
 - iv Press **ENT**.
- 3 To move a waypoint in the route:
 - i Move the cursor to the waypoint to move.
 - ii Press **MENU** and select **Move**.
 - iii Move the cursor to where the waypoint will be.
 - iv Press **ENT**.
- 4 To remove a waypoint from the route:
 - i Move the cursor to the waypoint to remove from the route.
 - ii Press **MENU** and select **Remove**. The waypoint is removed from the route, but the waypoint is not deleted.
- 5 To start navigating the route
 - i Press **MENU** and select **Start**
- 6 To end creating the route
 - i Press **MENU** and select **End**
- 7 To delete the route
 - i Press **MENU** and select **Delete**
 - ii Select yes to confirm.

Tip: The distance and bearing calculator can also be used to enter a course and save it as a route (see section 3-3).

B. Creating a new route from the routes display

- 1 In the routes display, press **MENU** and select **Create**.
- 2 A new route, with a default name and no waypoints, is displayed.
- 3 To change the route name:
 - i Select the route name at the top of the display and press **ENT**.
 - ii Change the name if necessary.
 - iii Press **ENT**.

- 4 To insert a waypoint in the route:
 - i Select where the waypoint will be:
 - To insert the first waypoint in a new route, select Leg 1.
 - To insert a waypoint at the end of the route, select the unused leg at the end of the list of waypoints.
 - Otherwise, select the waypoint to insert the new waypoint in front of.
 - ii Press **ENT**. A list of waypoints is displayed. Select the waypoint to use.

As waypoints are inserted, the distance and bearing of each leg is shown automatically. If the route has more waypoints than will fit on the display, press **▲** or **▼** to see them.

- 5 To remove a waypoint from the route:
 - i Select the waypoint to remove.
 - ii Press **MENU** and select **Remove**.
- 6 Repeat this process until the route is finished.
- 7 Press **ESC**.
- 8 Display the route on the chart (see section 6-2-3) and check that the route does not cross land or dangerous water.

6-2-2 Editing a route

Editing a route from the chart

- 1 In the routes display, select the route to edit. Press **MENU** and select **Edit on chart**.
- 2 The selected route is displayed on the chart, with a circle around the first waypoint.
- 3 Edit the route as described in section 6-2-1 A, starting at step 4.

Editing a route from the routes display

- 1 In the routes display, press **▲** or **▼** to highlight the route to edit. Press **MENU** and select **Edit**.
- 2 The selected route is displayed: the route name and a list of the waypoints.
- 3 Edit the route as described in section 6-2-1 B, starting at step 3.

6-2-3 Displaying a route on the chart

To view the selected route at the centre of the display:

- 1 In the routes display, press **▲** or **▼** to highlight the route to display. Press **MENU** and select **Display**.
Or, in the Chart display, press **MENU**, select **Find**, then select **Route**. Select a route from the list.
- 2 The TRACKFISH displays the selected route on the chart.

6-2-4 Deleting a route

- 1 In the routes display, press **▲** or **▼** to highlight the route to delete. Press **MENU** and select **Delete**.
- 2 Select **Yes** to confirm.

6-2-5 Deleting all routes

- 1 In the routes display, press **MENU** and select **Delete all**.
- 2 Select **Yes** to confirm.

6-2-6 Navigating a route

See section 3-1-3.

7 Satellites

GPS worldwide navigation

The US Government operates the GPS system. Twenty-four satellites orbit the earth and broadcast position and time signals. The positions of these satellites are constantly changing. The GPS receiver analyses the signals from the closest satellites and calculates exactly where it is on earth. This is called the GPS position.

The accuracy of the GPS position is typically better than 10 m (33 ft) for 95% of the time. A GPS antenna can receive signals from the GPS satellites when it is almost anywhere on earth.

DGPS

A DGPS system uses correction signals to remove some of the errors in the GPS position. The TRACKFISH can use one of two types of DGPS system:

- **WAAS and EGNOS DGPS**

WAAS and EGNOS are two satellite based DGPS systems. The correction signals are broadcast by satellites and are received by the TRACKFISH's standard GPS antenna. The accuracy of the corrected GPS position is typically better than 5 m (15 ft) for 95% of the time.

WAAS covers all of the USA and most of Canada. EGNOS will cover most of Western Europe when it becomes operational.

- **Differential beacon DGPS**

Differential beacons are land based radio transmitters that broadcast correction signals that can be received by a special receiver on the boat. Differential beacons are usually only installed near ports and important waterways, and each beacon has a limited range. The accuracy of the corrected GPS position is typically better than 2 to 5 m (6 to 16 ft).

GPS receiver

Navman GPS units have a sensitive 12-channel receiver, which tracks signals from all GPS satellites visible above the horizon and uses measurements from all satellites more than 5° above the horizon to calculate the position.


Each time a GPS receiver is turned on, it normally takes about 50 seconds before it outputs the first position. Under some circumstances it will take up to two minutes or longer.

7-1 Satellite display

The satellite display has information about the GPS satellites and GPS position.

To go to the satellite display, press **DISP**, select **Other**, then select **Satellite**.

The satellite display shows:

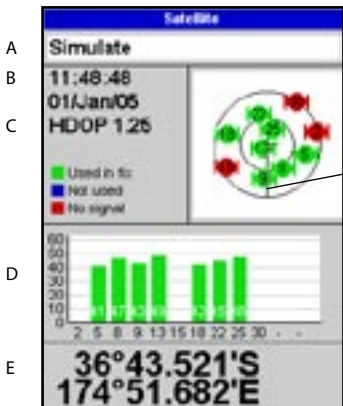

- A Status of GPS antenna, for example Acquiring, GPS fix, No GPS. If the unit is in Simulate mode it displays Simulate (see section 2-6).
- B Time and date from GPS satellites. Time is local time (UTC [GMT] plus local offset, see section 17-12)
- C HDOP: The error in the GPS position caused by satellite geometry. A low value indicates a more precise fix, a high value a less precise fix
- D Signal strengths of up to twelve visible GPS satellites. The higher the bar the stronger the signal
- E Boat position
- F Positions of visible GPS satellites:
 - Outer circle is horizon
 - Inner circle is 45° elevation
 - Centre is directly above
 - North is at top of display
- G If the boat is moving, COG is a line from centre

8 Sonar fishfinding: Introduction

Sonar functions require an optional sonar transducer to be installed and set up.

This section explains how to interpret the sonar displays, when and why to use the different frequencies and how fish are detected and displayed.

It also describes Gain and Range and shows examples of some of the different sonar displays.

8-1 Using the TRACKFISH

The TRACKFISH uses a sonar transducer attached to the hull. The transducer generates an ultrasonic pulse (sound that is above the hearing range of the human ear), which travels down towards the bottom at a speed of about 4800 ft/sec (1463 m/sec), spreading out into a cone shape.

When the pulse meets an object, such as a fish or the bottom, it is partly reflected back up towards the boat as an echo. The depth of the object or bottom is calculated by the

TRACKFISH by measuring the time taken between sending a pulse and receiving the echo. When an echo has been returned, the next pulse is sent.

The TRACKFISH converts each echo into an electronic signal, displayed as a vertical line of pixels. The most recent echo appears on the extreme right of the display, with the older echoes being scrolled towards the left, eventually disappearing off the display.

The scroll speed depends upon the water depth and scroll speed setting. See sections 17-3 and section 8-2, for more information.

The appearance of echoes displayed are affected by:

- the TRACKFISH settings (see sections 17-3, 8-5 and 8-6)
- echoes (different fish types, different bottom types, wrecks and seaweed; see section 8-2)
- noise (water clarity and bubbles; see section 8-2).

Cruise, Fishing and Manual Modes

The TRACKFISH has three sonar operating modes:

- **Cruising mode:** Use this when on the move. The TRACKFISH automatically adjusts its settings to compensate for water clarity and to display the bottom.

8-2 Interpreting the display

The sonar displays do not show a fixed distance travelled by the boat; rather, they display a history, showing what has passed below the boat during a certain period of time.

The history of the sonar signal displayed depends the depth of the water and the scroll speed setting.

In shallow water, the echoes have a short distance to travel between the bottom and the boat. In deep water, the history moves across the display more slowly because the echoes take longer to travel between the bottom and the boat. For example, when the scroll speed is set to *Fast*, at depths over 1000 ft (300 m) it takes about 2 minutes for the data to move across the display, whereas at 20 ft (6 m) it takes only about 25 seconds.

The scroll speed can be set by the user to display either a longer history with less fish information or a shorter history with more fish details (see section 17-3).

If the boat is anchored, the echoes all come from the same area of bottom. This produces a flat bottom trace on the display.

The screen shot shows a typical sonar display with the Fish symbols turned *Off*.

- **Fishing mode:** Use this when fishing. The TRACKFISH automatically adjusts its settings to compensate for water clarity and to best display fish, the bottom and other details.
- **Manual mode:** Use this to fine-tune the TRACKFISH settings by hand. Best results are often achieved in manual mode, but practice and experience are required to obtain the optimum settings for different conditions.

For more information about modes, see sections 8-5 and 8-6.


⚠ Warning: Use the automatic **Cruising or Fishing modes when learning to use the TRACKFISH or when travelling at speed.**

Strength of echoes


The colours indicate differences in the strength of the echo. The strength varies with several factors, such as the:

- Size of the fish, school of fish or other object.
- Depth of the fish or object.
- Location of the fish or object. (The area covered by the ultrasonic pulse is a rough cone shape and the echoes are strongest in the middle.)
- Clarity of water. Particles or air in the water reduce the strength of the echo.
- Composition or density of the object or bottom.

Note: Planing hulls at speed produce air bubbles and turbulent water that bombard the transducer. The resulting ultrasonic noise may be picked up by the transducer and obscure the real echoes.

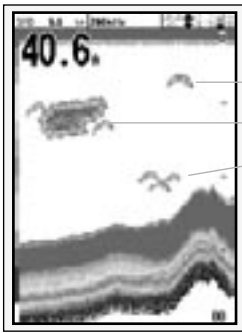

- A Single fish
- B Large school of fish
- C Small school of fish
- D Bottom

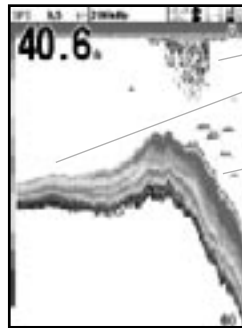

- A Kelp / Weed
- B Soft bottoms such as mud, weed and sand show as narrow bands
- C Hard bottoms such as rock or coral show as wide bands

Bottom types

Mud, weed and sandy bottoms tend to weaken and scatter the sonar pulse, resulting in a weak echo. Hard, rocky or coral bottoms reflect the pulse, resulting in a strong echo.

Frequency and cone width

The sonar pulse generated by the TRACKFISH transducer travels down through the water, spreading outwards in a cone shape. The cone width is dependent upon the frequency of the pulse; at 50 kHz it is approximately 45°, and at 200 kHz it is approximately 11°.

The differences in the cone width affect what is displayed. See section 8-3.

Water Depth	Cone width at 50 kHz	Cone width at 200 kHz
25	20	5
50	40	10
100	80	20
150	130	30
200	170	40
300	250	60
400	330	80
600	500	120
800	660	150
1000	830	190

45° cone


11° cone

Shadows


Shadows are created around areas where the ultrasonic beam cannot 'see'. These areas include hollows on the bottom or beside rocks and ledges, where the strong echoes returned off the rocks obscure the weak echoes of the fish and may also create a double bottom trace. See following for an example of the sonar display in such an environment. A double bottom trace is shown on the display.

When looking for fish with the wide angled 50 kHz frequency, be aware of increased shadows. Use the high frequency 200 kHz in areas that have rocks and ledges because this frequency reduces the shadow effect considerably.

Example of shadows

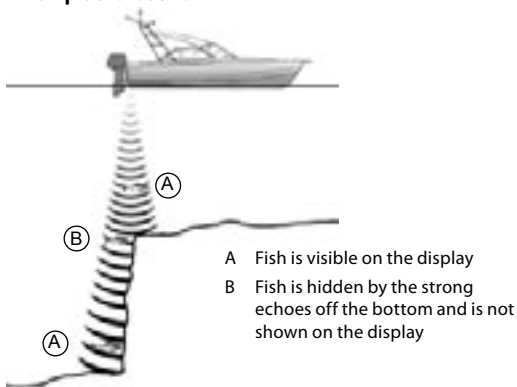

Sonar display of same area

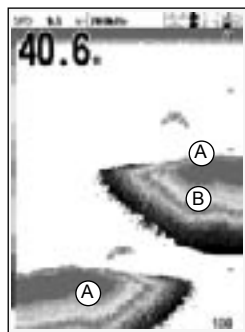

8-3 Single and Dual frequency fishfinding

Sonar frequencies

The TRACKFISH has two sonar frequencies, 200 kHz and 50 kHz. To select the sonar frequency to use:

- 1 Go to a sonar display (see section 9).
- 2 Press **MENU**, select **Frequency** and select 200 kHz, 50 kHz, or Mixed.

When to use 200 kHz

The 200 kHz frequency is especially suitable for use in shallow and medium depth water, typically less than 500 ft (150 m) and while running at speed.

At 200 kHz, the narrow cone reduces any noise caused by air bubbles.

The 200 kHz frequency generates a higher definition pulse which produces little shadow and returns excellent detail over a small area of bottom. Therefore, it gives excellent bottom

discrimination capability and is particularly good at showing individual fish, including bottom dwellers.

When to use 50 kHz

The 50 kHz frequency is particularly suitable for use in deep water, typically greater than 500 ft (150 m).

At 50 kHz, the cone covers an area of water about four times wider than the 200 kHz cone and penetrates to a greater depth with minimal loss of the return signal.

However, it produces a lower definition display with more shadow compared to the 200 kHz frequency. This means that a group of small fish, for example, could be displayed as a single item, while any fish very close to the bottom may not be found at all.

This frequency is useful for getting a deep, wide overview of the area so that any areas of interest can be identified and then examined in detail with the 200 kHz frequency.


When to use Mixed

The Mixed frequency combines the 200 kHz and the 50 kHz echoes on one sonar display, filling in detailed echoes in the centre of the sonar cone.

When to use 50/200 kHz

Operating the TRACKFISH at both 50 kHz and 200 kHz simultaneously on a split display can be very useful when operating in shallow to medium water, typically less than 500 ft (150 m), because the 50 kHz section of the display shows the general area, while the 200 kHz section can be viewed simultaneously for a more detailed look at any interesting feature.


To use 50/200 kHz, select the Split 50/200 display (see section 9-4).

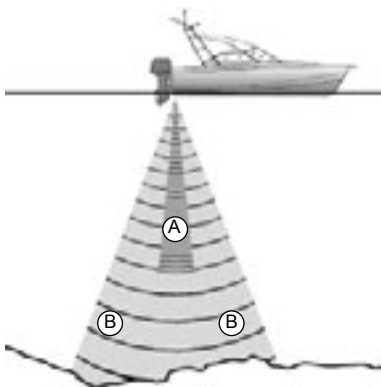


A Narrow angle, more detailed 200 kHz cone

B Wide angle, less detailed 50 kHz cone


Comparison of the same fish scenario displayed at different frequencies:

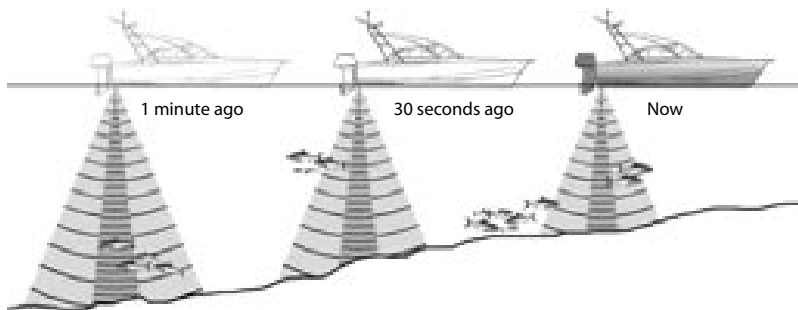


50 kHz display

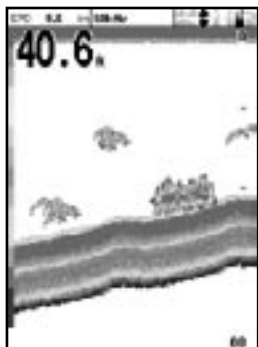


200 kHz display

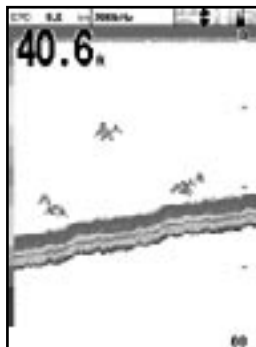

200/50 KHz display

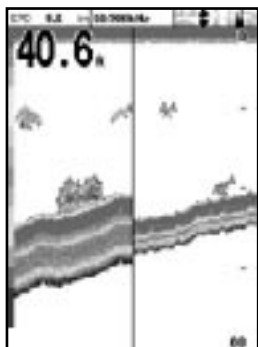

Mixed display

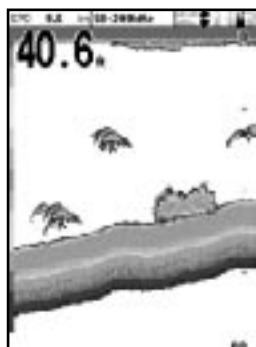

8-4 Fish detection and display

Where to find fish

Underwater features like reefs, wrecks and rocky outcrops attract fish. Use the 50 kHz or 50/200 kHz frequency display to find these features, then look for fish by passing over the feature slowly several times using the Zoom display (see section 9-2). If there is a current, the fish will often be found downstream of the feature.

When fishing with the TRACKFISH with the Fish symbols OFF , a weak fuzzy band may appear between the bottom trace and surface. This might indicate a thermocline - a rapid change in water temperature, such as the edge of a warm or cold current. The temperature difference can form a barrier which the fish may not swim through. In fresh water, fish often collect around a thermocline.

Fish symbols

The TRACKFISH uses NAVMAN's SBN technology to analyse sonar echoes and identify which are likely to be fish. The TRACKFISH can be set up to display a fish symbol and the depth over these echoes (see section 17-3, Fish symbols). While SBN is very sophisticated it is not foolproof - there will be times when the TRACKFISH will not be able to differentiate between fish and large air bubbles or rubbish.

Depending on the strength of a fish signal, the TRACKFISH can display a small, medium or large symbol (see section 17-3, Fish filter).

To see the maximum amount of information from the echoes, turn Fish symbols off. Fish appear as arches on the display.

Fish arches

In good conditions, a fish passing through the cone-shaped ultrasonic pulse is displayed as a fish arch. The 50 kHz frequency uses a wider

cone than the 200 kHz frequency. This makes the fish arches easier to see.

A fish arch starts when a fish enters the weak edge of the sonar cone, generating a weak echo that is displayed as the start of the fish arch. As the fish moves closer to the middle of the cone, the distance between the transducer and the fish reduces and the echo is displayed at progressively shallower depths, producing a rising shape. When the fish passes directly beneath the middle of the cone, the echo becomes strongest and thickest. As the fish passes out of the middle of the cone the reverse happens with a progressively weaker and deeper echo.

There are many reasons why fish arches may not be seen. For example:

- Poor transducer installation (see *Transom Transducers Installation Guide*).
- If the boat is anchored then fish will tend to show on the display as horizontal lines as they swim into and out of the transducer sonar beam. Slow speeds in deeper water give the best fish arch returns.
- Range is important. It will be much easier to see fish arches when using zoom mode to concentrate on a particular section of water, rather than just displaying everything from the surface to the bottom. Zooming increases screen resolution and is necessary for good fish arches.
- It is difficult to get fish arches in shallow water as the transducer sonar beam is very narrow near the surface and fish do not stay within the beam long enough to display an arch. Several fish in shallow water tend to display as randomly stacked areas of colour.
- Wave motion may result in distorted fish arches.



Fun fish symbol



Normal fish symbol



Fun symbol + depth



Fish arch


8-5 Range

Range is the vertical depth displayed on the TRACKFISH sonar display. For example, if the range is 100 m, then the sonar display shows depths between 0 and 100 m. The range is displayed at the bottom, right corner of a sonar display.

The TRACKFISH has two range modes:



Auto: The TRACKFISH adjusts the range automatically so that the bottom of the water is always shown at the bottom of the display. Auto range is recommended for normal operation.

To set Auto mode:

- 1 Go to a sonar display (see section 9).
- 2 Press , select Range and select Auto.

Manual: The TRACKFISH does not adjust the range automatically. If the bottom depth is below the range, the bottom will not appear on the display. Manual range is useful if the bottom depth changes rapidly, because Auto range will cause the display to change range frequently.

To set Manual range or to change the range:

- 1 Go to a sonar display (see section 9).
- 2 Either press  to increase range or press  to decrease range

⚠ Warning: Use the Auto range when learning to use the TRACKFISH or when travelling at speed.

Zoom range and offset

The sonar Zoom and Bottom displays can show a magnified part of the range (see sections 9-2 and 9-3).

8-6 Gain and threshold


Gain and threshold settings control the amount of detail displayed on a sonar display:

Gain: The gain of the sonar receiver. The gain should be high to display good detail, but if the gain is too high then information from the strong bottom signal is lost and false echoes might be displayed. There is a separate gain setting for each sonar frequency, 50 kHz and 200 kHz.

Threshold: Return echoes less than the threshold are ignored. The threshold should be as low as possible, but if the threshold is too low, unwanted noise will be displayed. Threshold is set as a percentage of gain. For example, if the threshold is 50 %, then return echoes less than 50 % of the maximum signal are ignored. There is a separate threshold setting for each sonar frequency, 50 kHz and 200 kHz.

The gain window

To display or change the current settings for gain, select a sonar display and press **ENT**. Select **Threshold** to display the thresholds.

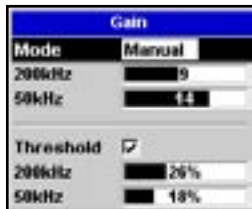

This display is called the gain window.

Changing mode

The TRACKFISH has three operating modes, In Cruising and Fishing modes, the TRACKFISH automatically adjusts gain and threshold for good performance. In manual mode, you can hand adjust the settings.

To change the mode from the Gain window, Select **Mode** and then select **Fishing**, **Cruising** or **Manual**. When you select **Manual**, the TRACKFISH reverts to your last manual settings.

Changing gain and threshold

- 1 In the Gain window, press **▲** or **▼** to select the setting to adjust.
- 2 Press **▲** or **▼** adjust the setting. The TRACKFISH changes to Manual mode.

Tip: Use the A-scope display to help set gain or threshold manually (see section 9-5).

9 Sonar fishfinding: Displays

To show the Sonar display, press **DISP**, select **Chart** or **Sonar**, then select a sonar display.

There are five kinds of sonar display. To use a display, press **MENU**, select **Sonar splits**, then select the type of display to use:

No split: Sonar history display at a single or mixed frequency (see section 9-1).

Split zoom: Sonar history plus a zoomed section (see section 9-2)

Split bottom: Sonar history plus a bottom trace in a zoomed section (see section 9-3)

Split 50/200: Sonar histories at 50 and 200 kHz (see section 9-4)


Split A-Scope: Sonar history plus echo strength (see section 9-5)

If the display is split, adjust the split ratio if required:

- 1 Press **MENU** and select **Sonar window split**.
- 2 Press **←** or **→** to adjust the ratio.
- 3 Press **ENT**.




9-1 Sonar history display - no split

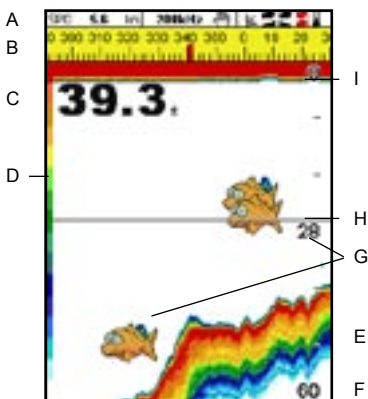

- A Optional data header (see section 2-7-3)
- B Optional compass (see section 2-7-4)
- C Depth
- D Colour bar
- E Bottom
- F Range
- G Fish symbols with depth
- H Depth line
- I Surface

The display scrolls from right (most recent echoes) to left (oldest echoes).

9-2 Sonar Zoom display

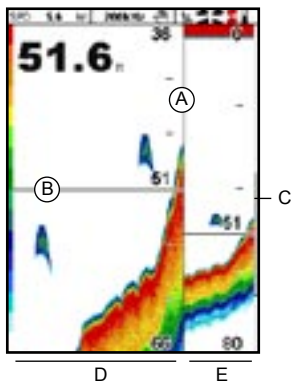

- A Divider line
- B Depth line marks the centre of the zoomed area
- C Zoom bar
- D Zoom section
- E Sonar history

The display shows the sonar history on the right and the zoomed section on the left.

The zoom bar on the far right shows the area of the history that is magnified in the zoom section:

- Press or to adjust the zoom range (the range of depths included in the zoom section).
- If **Bottom lock** is on, the zoom depth (the depth of the zoom section) is adjusted automatically so that the bottom is always displayed in the zoom section.

If **Bottom lock** is off, press or to manually adjust the zoom depth. If **bottom lock** is on it will turn off.


Bottom lock

To turn **Bottom lock** on or off:

- 1 Press and select **Bottom lock**.
- 2 Select **On** or **Off**.

or If **Bottom lock** is on, pressing or will turn it off.

9-3 Sonar Bottom display

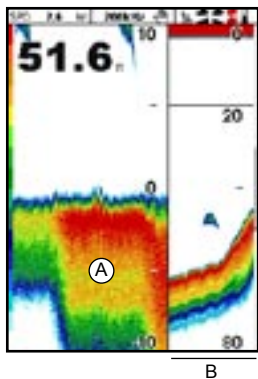

- A Zoomed bottom signal
- B Sonar history


The display shows the sonar history on the right and the bottom signal as a flat trace in the centre of the zoom section on the left. The flat trace make it easy to compare the echo strengths shown in the bottom signals. This can help to identify the type of bottom and objects close to the bottom.

The zoom bar on the far right shows the area of the history that is magnified in the zoom section:

- Use the or keys to adjust the zoom range.
- The **TRACKFISH** calculates the zoom depth automatically.

It is not necessary to turn **Bottom lock** on for this display.

9-4 Sonar 50/200 display

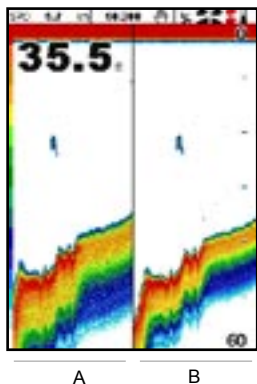


The display shows:

- A the 50 kHz sonar history on the left
- B the 200 kHz sonar history on the right.

Gain can be set independently for each frequency (see section 8-6). Range applies to both frequencies (see section 8-5).

9-5 Sonar A-Scope display

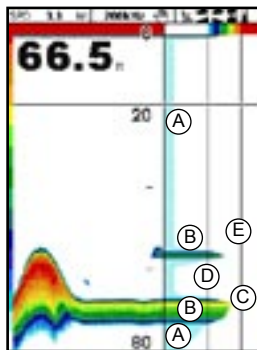

The display shows the sonar history on the left and the A-Scope display on the right. The A-Scope shows:

A, B, C The strengths of echoes being received now from different depths - the longer the horizontal line the stronger the signal:

- A Unwanted noise echoes.
- B Echoes from fish and the bottom
- C The strongest echo, usually from the bottom











D A vertical line showing the threshold, the weakest echo to display on the sonar history

E A vertical line showing the gain setting; echoes above this strength will display as the maximum signal strength

Use the A-Scope while adjusting the gain and threshold settings manually (see section 8-6).

Setting gain and threshold

It is convenient to use the A-scope display when adjusting gain and threshold manually. Follow this procedure to adjust gain and threshold for normal circumstances:

- 1 Switch to a sonar display (see section 9). If necessary, press  or  to adjust range so that the bottom is displayed.
- 2 If necessary, select the sonar frequency to adjust the settings for. Press , select Frequency and select 200 kHz or 50 kHz.
- 3 Press , select Sonar splits then select Split A-scope.
- 4 Press  to display the Gain window. To adjust gain or threshold for a frequency, press  or  to select the setting to adjust, then press  or  to change the setting.
- 5 Set threshold to zero.
- 6 Adjust Gain so the peak of the strong signal from the bottom just touches the gain line.
- 7 Adjust threshold so that it is just to the right of the noise.
- 8 Press  to close the gain window.
- 9 If required, repeat these steps to adjust gain and threshold for the other frequency.

Note: Setting the gain higher will display more detail from weak echoes, like fish, but will lose detail from the strong echo from the bottom.

Fish recognition

The echo strengths shown on the A-scope can be useful in recognising the type of fish. Different species of fish have different sizes and shapes of swim bladders. The air in the swim bladder reflects the ultrasonic pulse, so the strength of the echo varies between fish species according to the size and shape of the swim bladder.

When catching fish from a school, note the species and the strength of the echo that it returns on the A-scope. Then, when that particular echo is seen again, it is likely to be the same fish species.

Bottom type

The shape of the echo strengths in the A-Scope can help you to recognise the type of bottom.


10 Gauges display

The Gauges display shows boat data, such as water speed, as analog or digital gauges.

To go to the Gauge display, press **DISP** and select Chart, then Chart+Gauges or select Sonar then Sonar+Gauges.

If necessary, press **DISP** twice to switch to the Gauges display (see section 2-7-1).

Before using the Gauge display, set Speed range, Max RPM and Max fuel flow (see section 17-11).

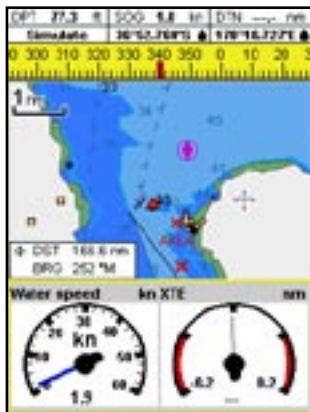

Changing the Gauges display

- 1 Go to the Gauges display and press **MENU**.
- 2 To select the gauge type.
 - i Select Gauge type.
 - ii Select Analog (round) or Digital (numbers).
- 3 To select the gauge size.
 - i Select Gauge size.
 - ii Select Small, Medium or Large.
- 4 To change the data displayed:
 - i Select Gauge setup.
 - ii Change a gauge:
 - a Press the cursor keys to highlight the gauge.
 - b Press **ENT** to display a menu of data items.
 - c Select a data item that is available on your system.
 - iii Repeat the above step to set the other gauges.
- 5 Press **ESC** to return to the Gauges display.

11 Data display



The data display has large numeric data fields and a graph of depth and water temperature if available. To go to the data display, press **DISP**, select **Other**, then select **Data**.

To select what data is displayed:

- 1 Press **MENU** and select **Data setup**.
- 2 Change a data field:
 - i Press the cursor keys to highlight the field.
 - ii Press **ENT** to display a menu of data items.
 - iii Select a data item that is available on your system or select **None** to leave the field empty.
- 3 Repeat the above step to set the other data fields.
- 4 Press **ESC**.

12 Fuel functions and display

The Fuel functions require optional fuel sensors to be installed.

12-1 When you add or remove fuel

When you add or remove fuel in a boat with no SmartCraft fuel tank level sensors, you must tell the TRACKFISH, otherwise **REMAINING**, **RANGE** and the low fuel alarm will be meaningless.

A When you completely fill the tank

- 1 Fill the tank.
- 2 Press **MENU** one or more times until the **Setup** menu is displayed, then select **Fuel**.
- 3 Select **Tank full**.

Note: Underfloor fuel tanks are often difficult to refill to the same level twice, due to air pockets. With underfloor fuel tanks:

- Trim the boat to the same angle in the water each time you follow procedure A.
- Mostly use procedure B below when adding fuel, but completely fill the tank and follow procedure A about every tenth time you add fuel.

B When you part fill the tank

- 1 Before adding fuel, go to the fuel display and write down the value of **Remaining**, which is the amount of fuel now in the tank.
- 2 Add fuel to the tank, writing down how much you add.
- 3 Add together the two figures you have written down, to calculate the amount of fuel now in the tank.
- 4 Press **MENU** one or more times until the **Setup** menu is displayed, then select **Fuel**.
- 5 Set **Remaining** to the amount of fuel that you calculated was now in the tank.


Note: If you follow procedure B every time you add fuel, then a small error will accumulate, because it is hard to measure exactly how much fuel you add. To avoid this, completely fill the tank and follow procedure A about every tenth time you add fuel.

C When you remove fuel


Repeat procedure B, but subtract the fuel you have removed from the original amount of fuel in the tank to calculate the amount of fuel now in the tank.

12-2 Fuel display

Fuel display without engine RPM

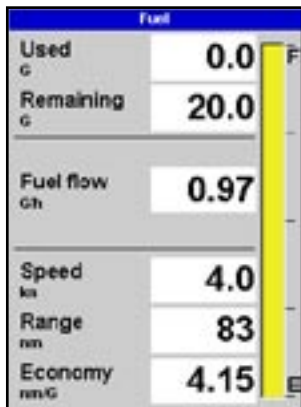

Fuel display with engine RPM

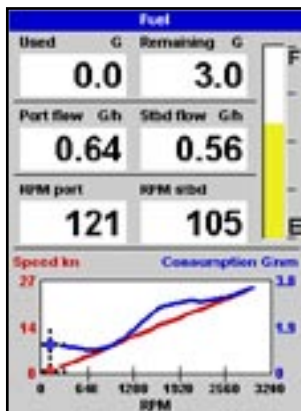

To go to the Fuel display, press **DISP**, select **Other**, then select **Fuel**. The display is different if engine RPM is available (requires SmartCraft or diesel sensors to be installed):

The Fuel display shows

Used

The total fuel used since this was last reset with the Clear Used command.

Remaining

The amount of fuel remaining in the tank.

Flow

The fuel consumption per hour. For twin engine installations, the fuel flow for each engine is shown separately. This is useful for checking that both engines are under the same load.

Speed

If the TRACKFISH has both GPS and paddlewheel speed available then you can select which to use. The choice affects the calculated Range and Economy (see section 17-5 Speed source).

If the TRACKFISH uses a paddlewheel sensor to measure speed, then the speed must be accurately calibrated (to calibrate the TRACKFISH paddlewheel, see section 17-11).

Consumption

The fuel used per unit of distance travelled. The smaller this number, the better the fuel economy. Adjust the throttle and trim to achieve the lowest consumption.

Economy

Economy is the distance travelled per unit of fuel used. The TRACKFISH calculates this from the boat speed and fuel used. The bigger this number, the better the fuel economy

Range

The estimated boat range at the current fuel flow.

12-3 Fuel consumption curves

A fuel consumption curve is a powerful tool for assessing your boat performance in different conditions and for helping you to run at the most economical speed for the conditions.

12-3-1 Making a fuel consumption curve

Making a fuel consumption curve requires running the boat in a straight line through the engine's full RPM range for about 15 minutes.

For your first curve, choose a calm day with light wind and little current; have a typical load and a freshly cleaned hull. Then you can make fuel consumption curves for different boat, weather or sea conditions. Compare these with your first curve to see how your boat's performance changes with conditions.

Making a curve

- 1 Start running the boat in a straight line.
- 2 Press **ENT** one or more times until the Setup menu is displayed, then select **Fuel**.
- 3 Select **Fuel consumption curve**, then select **New**.



- 4 Enter the comfortable maximum RPM you have measured for the engine. Do not use the maker's maximum RPM.
- 5 The TRACKFISH then asks you to set the minimum RPM. Set the throttle for minimum RPM; for a twin engine boat set both engines to about the same minimum RPM.

Now, do not change the engine speed. Wait for about 60 seconds for the boat to stabilise, then press **ENT**. Wait while the TRACKFISH records the data.

- 6 The TRACKFISH then asks you to set the throttle to achieve a target RPM. For a twin engine boat set both engines to about the target RPM. When the engine RPMs are correct, the Target RPM box will turn green.

Fuel consumption curves require engine RPM, which requires SmartCraft or diesel sensors to be installed.



Now, do not change the engine speed. Wait for about 60 seconds for the boat to stabilise, ensuring the Target RPM box stays green. Then press **ENT**. Wait while the TRACKFISH records the data.

- 7 The TRACKFISH repeats the above step to record data up to the maximum RPM. Then the TRACKFISH asks if you want to save the curve. Select **Yes**. The TRACKFISH asks for a name for the curve. Change the default name if required, then press **ENT**. The new curve is stored.

Note

To interrupt making the curve at any time, press **ESC**.

12-3-2 Managing fuel consumption curves

Record several curves for different conditions.

Renaming a curve

- 1 Press **MENU** one or more times until the Setup menu is displayed, then select **Fuel**.
- 2 Select **Fuel consumption curve**. Select **Name**, press **ENT** and select the name of the curve to rename.
- 3 Select **Rename** and press **ENT**. Change the name and press **ENT**.

Deleting a curve

- 1 Press **MENU** once or more until the Setup menu is displayed, then select **Fuel**.
- 2 Select **Fuel consumption curve**. Select **Name**, press **ENT** and select the name of the curve to delete.
- 3 Select **Delete** and press **ENT**.

12-3-3 Using fuel consumption curves

A fuel consumption curve is displayed on the fuel display:

- a For a twin engine boat, keep the RPM of both engines similar while using a curve.
- b More information about fuel consumption curves is available in Navman's Diesel flow sensors installation and operation manual.

Displaying a curve


- 1 To go to the Fuel display, press **DISP**, select **Other**, then select **Fuel**.
- 2 Press **MENU**, press **ENT** and select the name of the curve to display on the fuel display.

Using a curve

Compare your boat's performance now, at the current RPMs, with the boat's performance when you made the curve. You can compare your boat's performance now with a curve made under ideal conditions or with a curve made under similar conditions.

Information in a curve

- A RPM of the boat now. For a twin engine boat, the RPM is the average of the two RPMs.
- B Red curve: boat speeds at different RPMs recorded when you made this fuel consumption curve.
- C Red marker: the boat speed now. This marker is below the red curve, showing that the boat speed now at this RPM is less than when you recorded the curve.

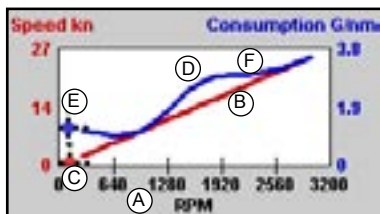

- D Blue curve: fuel consumption at different RPMs recorded when you made this fuel consumption curve.
- E Blue marker: the fuel consumption now. This marker is below the blue curve, showing that the fuel consumption now at this RPM is better than when you recorded the curve.
- F If the blue curve has a dip, then running the boat at this RPM will give the best speed for the least fuel consumption.

13 Tides display

The tides display is available on C-MAP charts. The tides display shows tide information at a tide station for the selected date.

Note: The tides display requires the local time offset to be set to work correctly (see section 14-11)

To show the tides display for the tide station nearest to the boat, press **DISP**, select **Other**, then select **Tides**.

To go to the tides display for any tide station:

- 1 From the chart display, press **MENU** and select **Find**.
- 2 Select **Tide stations**.


- 3 A list of tide stations are displayed. Select the tide station to display. The chart redraws with the tide station centred.
- 4 Press **MENU** and select **Chart info**.
- 5 Select **Tide height**.

Choosing the date of the tide chart

- 1 Press **MENU**.
- 2 Select **Today**, **Next day** or **Prev day**.

To choose a different date from these, select **Set date**, edit the date, press **ENT**.

The tides display shows data for the chosen date

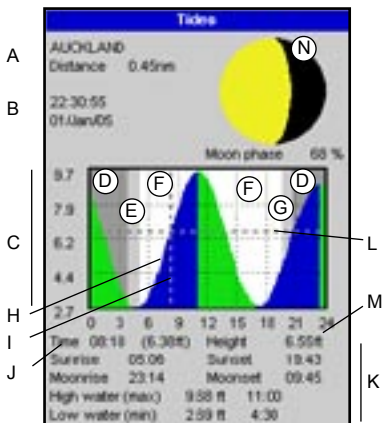

- A Tide station name and distance from boat
- B Current time and chosen date for display
- C Tide chart
- D Night
- E Dawn
- F Day
- G Dusk
- H Tide height
- I Time cursor, a vertical dotted line. Press **←** or **→** to move cursor sideways
- J Time of cursor and tide height at that time
- K Data for the chosen date
- L Tide height cursor, a horizontal dotted line. Press **↑** or **↓** to move cursor up and down.
- M Height of cursor on the tide chart
- N Moon phase for moon at the current time on the chosen date

14 User card display

A C-MAP™ user card is an optional plug-in card that can store data files (see section 1-4). There are three types of files: waypoints, routes or a track.

To go to the user card display, press **DISP**, select Other, then select User card.

Note

- 1 Before using a user card, remove any chart card and plug the user card in. When you have finished with the user card, remove the user card and replace the chart card (see section 1-3).
- 2 The older 5 volt cards are not supported.

The user card display has:

File list

A list of the files on any user card in the TRACKFISH. If there are more files than will fit on the display, press **UP** or **DOWN** to scroll up or down a page at a time.

Waypts, Routes

The number of waypoints and routes currently in the TRACKFISH.

Track 1 to Track 5

The number of points in tracks 1 to 5 currently in the TRACKFISH.

Note:

- 1 To save TRACKFISH data onto the user card, use the Save command (see below).
- 2 Data stored on the user card and shown on the file list is not available to be used by the TRACKFISH until loaded into the TRACKFISH with the LOAD command (see below).

Saving data to the user card

This saves all the TRACKFISH's waypoints, all the TRACKFISH's routes or one of the TRACKFISH's tracks to one file on the user card.

- 1 Press **MENU** and select Save.
- 2 Select Waypts, Routes or Tracks.
- 3 For Tracks, select the track number to save.
- 4 The new file is created. Change the name if required. The new file appears in the file list.

User card			
Name	Type	Date	Time
Device not formatted			
In memory	Track 2:	0	
Waypts: 54	Track 3:	0	
Routes: 11	Track 4:	0	
Track 1: 1	Track 5:	0	

Loading data from the user card to the TRACKFISH

This loads one file from the user card to the TRACKFISH:

- A waypoints file: The new waypoints are added to any existing waypoints in the TRACKFISH. If a new waypoint has the same name as an existing waypoint but has different data, the TRACKFISH displays both waypoints. Select:
 - Skip:** Do not load the new waypoint.
 - Replace:** Load the new waypoint and replace the existing one.
 - Skip all:** Do not load any new waypoints which have the same names as existing waypoints.
 - Rplc all:** Load all new waypoints which have the same names as existing waypoints; the new waypoints replace the existing waypoints.
- A routes file: The new routes are added to any existing routes in the TRACKFISH. If a new route has the same name as an existing route but has different data then the TRACKFISH asks which route to keep.

- A track file: The new track will replace the existing track in the TRACKFISH.

To load a file to the TRACKFISH:

- 1 Select the file to load.
- 2 Press **MENU** and select **Load**.

Deleting a file from the user card

- 1 Select the file to delete.
- 2 Press **MENU** and select **Delete**.
- 3 Select **Yes** to confirm.

Rereading the file information

This reads the file names from the user card and displays them. Reading does not load any file data into the TRACKFISH. You should not need to do this.

- 1 Press **MENU** and select **Card**.
- 2 Select **Read**.

Formatting the user card

Formatting prepares a user card for use. Format the card if there is an error message saying that the card is not formatted. Any data files on the card are deleted.

- 1 Press **MENU** and select **Card**.
- 2 Select **Format**.
- 3 Select **Yes** to confirm.

⚠ Warning: Do not format a chart card.

Sorting the file names

This sorts the displayed file names.

- 1 Press **MENU** and select **Sort**.
- 2 Select sort by **Name**, **Type** or **Time**.

15 DSC/Buddy track displays

Buddy track requires an optional Navman DSC VHF radio to be installed. Buddy track tracks other boats which have DSC radios connected to their GPS receivers by NavBus and are in VHF range. For information on setting up and using the VHF radio for buddy track, see the radio's operation manual.

To go to the DSC/Buddy track displays, press **DSP**, select **Other**, then press **←** or **→** to select one of the three displays: **Distress**, **Poll** or **Buddy track**.

If there are more items than will fit on the display, press **+** or **-** to see the others.

15-1 The displays

DSC-buddy track		
Distress	Poll	Buddy track
Date Time	Latitude Longitude	Name MMSI
22-10-05 22:22:05	00°00.000N 000°00.000E	Bob 124122311
22-10-05 22:22:05	00°00.000N 000°00.000E	Shane 124122311
22-10-05 22:21:05	00°00.000N 000°00.000E	Paul 124122311

Distress

Boats that have sent DSC distress messages and their positions.

DSC-buddy track		
Distress	Poll	Buddy track
Date Time	Latitude Longitude	Name MMSI
22-10-05 22:22:05	00°00.000N 000°00.000E	Shane 124122311
22-10-05 22:22:05	00°00.000N 000°00.000E	John 199979650
22-10-05 22:21:05	00°00.000N 000°00.000E	Paul 044274444
22-10-05 22:21:05	00°00.000N 000°00.000E	Steve 187206360
22-10-05 22:21:05	00°00.000N 000°00.000E	Paul 437226340

Poll

Boats you have manually polled on the VHF radio, and their position at that time.

DSC-buddy track	
Distress	Buddy track
	Shane Position: 00°00.000N 000°00.000E Time: 12:32:15 MMSI: 124122311
	Peter Position: 00°00.000N 000°00.000E Time: 12:32:15 MMSI: 199979650
	Paul Position: 00°00.000N 000°00.000E Time: 12:32:15 MMSI: 442427144

Buddy track

Buddy boats from your DSC radio. The radio regularly calls the boats and updates their positions.

When your DSC radio receives a distress message, the TRACKFISH creates a distress waypoint at the boat position. Distress waypoints have default names like DSTRSS01. The TRACKFISH displays a Distress warning.

Select:

- **OK** to return to what you were doing.
- **Display** to switch to Chart and display the position of the boat sending the distress message.



Boat positions

The boat positions on the TRACKFISH can differ from the true boat positions:

Distress: The position is the distress waypoint, which is where the boat was when it sent the distress message.

Polled boats: The position is where the boat was when you last polled the boat.

Buddy track: The position is where the boat was when your radio last polled the boat.

15-2 Using the displays

Displaying a boat on the chart

- 1 Press **▲** or **▼** to select a boat.
- 2 Press **MENU** and select **Display**. The TRACKFISH switches to chart display, with the selected boat position in the middle (see Boat positions above).

Going to a boat

- 1 Press **▲** or **▼** to select a boat.
- 2 Press **MENU** and select **Goto**. The TRACKFISH starts navigating to the boat's position (see Boat positions above).

Creating a waypoint

Polled and buddy track boats are not waypoints. To create a waypoint at the position of a polled boat (see Boat positions above):

- 1 Press **▲** or **▼** to select a boat.
- 2 Press **MENU** and select **Create waypoint**. Edit the waypoint data if required (see section 5-2-7).

Editing a waypoint

A distress message creates a waypoint for the boat or you can create a waypoint at a polled boat's position. To change the data of these waypoints:

- 1 Press **▲** or **▼** to select a boat.
- 2 Press **MENU** and select **Edit waypoint**. Edit the waypoint data if required (see section 5-2-7).



On a chart display:

- A Distress boats are distress waypoints
- B Buddy track boats are buddy symbols

Deleting a boat

At the Distress or Poll displays:

- 1 Press **▲** or **▼** to select a boat.
- 2 Press **MENU** and select **Delete**. The boat is deleted from that display. Delete any boat waypoint manually (see section 5-2-5).

Buddy track boats automatically disappear from the Buddy track display when your DSC radio can not pick up their signal.

Deleting all boats

At the Distress or Poll displays:

- 1 Press **▲** or **▼** to select a boat.
- 2 Press **MENU** and select **Delete all**. All boats are deleted from that display and any boat waypoints are deleted.

16 About display



To show the about display, press **DISP**, select Other, then select About. Press **←** or **→** to select a display.

The about display shows:

- The software version and date.
- The world chart version.
- Any card fitted.
- The number of waypoints, routes and tracks in the TRACKFISH.
- Wiring information for the TRACKFISH connectors.

In the unlikely event of having to contact a NAVMAN dealer for service, quote the software version number and date.

17 Setting up the TRACKFISH

The TRACKFISH has a number of advanced features which are set up through the setup menu. We recommend that you become familiar with the operation of the unit using the default settings before making any changes in these menus.

To go to a setup option menu, press **MENU** one or more times to display the setup menu, then select an option.

Note:

- 1 The Setup menu options are explained in the following sections.
- 2 Section 2-1 describes how to set or change data in the setup menus.
- 3 The setup data available will depend on the optional sensors and instruments installed.



Setup option menus

Factory default settings are shown. The setup data available will depend on the optional sensors and instruments installed.

System (see 17-1)

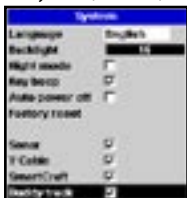


Chart (see 17-2)



Sonar (see 17-3)



General, Water, Land and Other submenus (17-2)

GPS (see 17-4)



Fuel (see 17-5)



SmartCraft

(See the *SmartCraft Gateway Installation and Operation Manual*)

Track (see 17-6)



Logs (see 17-7)



Alarms (see 17-8)



Units (see 17-9)



 
Comms (see 17-10)



Calibrate (see 17-11)



Time (see 17-12)



Favourites (see 17-13)



Simulate (see 17-14)



17-1 Setup > System

Press **MENU** once or more until the Setup menu is displayed, then select **System**:



Language

Select the language for the displays. The options are: English, Italian, French, German, Spanish, Dutch, Swedish, Portuguese, Finnish and Greek.

Tip: In case you can't read the current language, the language setting is found at the top of the system menu.

Backlight

Select the backlight level for the keys and display (see also section 2-3)

Night mode

Night mode sets the palette for all displays. Normal palette, for daytime

All displays have a palette optimised for night time.

See also section 2-3. To change only the chart palette, see section 17-2.

Key beep

Enables or disables the beep when a key is pressed.

Auto power off

See section 2-2.

Factory reset

This option returns all of the TRACKFISH settings (except the language, waypoints and routes) to the default factory settings shown on the setup menus.

Sonar

- Disable any sonar transducer and disable sonar functions.
- A sonar transducer is fitted. Enable sonar operation.

See section 18-6.

Y Cable

- No GPS/fuel Y cable is fitted.
- A GPS/fuel Y cable is fitted.

See section 18.

SmartCraft

- No SmartCraft gateway is fitted. Disable SmartCraft functions.
- SmartCraft gateway is fitted. Enable SmartCraft operation.

See section 18-10.

 

Buddy track

- No DSC VHF radio is fitted. Disable Buddy track.
- A DSC VHF radio is fitted. Enable Buddy track.

See section 18-9

17-2 Setup > Chart

Press **ENTER** once or more until the Setup menu is displayed, then select Chart:

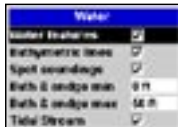

Rotation

The options for chart rotation are:

North up: North is always at the top of the chart display.

Track up: The chart is rotated so that the boat direction is to the top of the display. This option is useful for navigating narrow harbours or rivers. The TRACKFISH asks for a course deviation resolution; this is how much the boat direction needs to change to make the chart redraw.

Tip: If the chart redraws too frequently, increase the course deviation setting.

Course up: This option is only available if the boat is navigating to a destination. The chart is rotated so that the plotted course to the destination is vertical.

Palette

Select the colour scheme for the LCD display. The options are:

Normal

Sunlight: Brighter colours, more visible in sunlight.

Night: Reversed colours for night, to preserve night vision.

Map datum

TRACKFISH GPS positions are based on a worldwide reference (datum) known as WGS 84. Most paper charts are based on WGS 84. However, some paper charts are based on other datums. In these cases, the latitude and longitude coordinates of objects on the TRACKFISH chart display are different to the latitude and longitude coordinates of these objects on the paper chart. This applies to all objects, such as the boat, waypoints, tracks, lines of latitude and longitude and cartographic features such as land, rocks, buoys and depth contours.

Use **Map datum** to select the TRACKFISH map datum to match the datum of the paper chart. Then, the latitude and longitude coordinates of objects displayed on the TRACKFISH will change to match the corresponding coordinates on the paper chart.

Setting map datum

- 1 In the Chart setup menu, select **Map datum**.
- 2 Select the map datum for the paper chart you are using.
- 3 If you select a datum other than WGS 84 the TRACKFISH asks if you want to apply the NMEA datum offset (see below).

⚠ Warning: When you change to a chart with a different datum, change the TRACKFISH map datum again.

NMEA datum offset

If you select a map datum other than WGS 84, the map datum offset can be applied to latitude and longitude coordinates sent on the TRACKFISH NMEA output:

Latitude and longitude coordinates displayed on any NMEA repeater do not match the coordinates on the TRACKFISH. Latitude and longitude coordinates broadcast on any NMEA VHF transmitter will be the same as the coordinates on a WGS 84 chart.

Latitude and longitude coordinates displayed on any NMEA repeaters match the coordinates on the TRACKFISH. However, latitude and longitude coordinates broadcast on any NMEA VHF transmitter will be slightly offset from coordinates on a WGS 84 chart.

Map shift

⚠ Warning: Map shift is for eliminating minor offsets. It should not be used if the correct datum is available. Use map shift with caution: incorrect application will cause incorrect boat positions.

Some charts have consistent position errors. To correct this, apply a map shift. After a map shift:

- The positions of cartographic features (such as land, rocks, buoys and depth contours) move on the TRACKFISH chart display to where they should be.
- The positions of the boat, waypoints, tracks, and lines of latitude and longitude on the TRACKFISH chart display remain unchanged.

Applying a map shift

- 1 Move the boat to a known point on the chart, for example a marina berth.
- 2 In the Chart setup menu, select **Map shift**.
- 3 Move the cursor to the position on the chart where the boat actually is.
- 4 Press **ENTER** and select **Set**.
- 5 Press **ESC** to set the new map shift. The boat will now be displayed at its actual location.

Clearing the map shift

Clearing the map shift removes any map shift from the cartographic features on the TRACKFISH chart display.

- 1 In the Chart setup menu, select **Map shift**.
- 2 Press **ENTER** and select **Clear**.
- 3 Press **ESC**.

General submenu

Plotter mode

Only scales available on the chart card can be displayed.

If you press **+** or **-** to select a chart scale which is not available, on the chart card, the chart display will change to this scale but will only display the boat position and track (if enabled). The rest of the display is white with black crosshatch lines and no chart information is displayed. This is useful to zoom to a small scale to track small boat movements or if there is no detailed chart for an area.

Mixing levels

Mixes lower detail charts with higher detail charts on chart boundaries.

: Lower detail chart is not shown.

: Lower detail chart shown; this is slower to redraw.

Anticlutler	<input type="checkbox"/> Names and icons shown. Note: this is independent of the change in detail shown at different zoom levels. <input checked="" type="checkbox"/> Hides some less important names and icons when they overlap to make the chart clearer.
Projected course	The TRACKFISH can estimate the course after a given time, based on the current speed and heading (see section 3-4). The options are 2 minutes, 10 minutes, 30 minutes, 1 hour, 2 hours or Off.
CDI scale	See Appendix C. The options are 0.05, 0.1, 0.2, 0.5, 1.0, 2.0, 4.0 and 10.0 distance units.

Lat/lon grid	<input checked="" type="checkbox"/> displays a latitude and longitude grid.
Boundaries	Displays boundaries around areas where more detailed chart coverage is available: Auto shows the next four detail levels; On shows all.
Text/icon size	Select the size of chart text and icons.


Water submenu

Water features	<input checked="" type="checkbox"/> displays nature of seabed (for example, M shows areas of mud) and tide station icons.
Bathymetric[s] lines	Displays underwater depth contours between Bath & dndgs min and max.
Spot soundings	Displays underwater depth contours between Bath & dndgs min and max.
Bath & sndgs min	The minimum depth for Bathymetrics and Spot soundings.
Bath & sndgs max	The maximum depth for Bathymetrics and Spot soundings.
Tidal stream	<input checked="" type="checkbox"/> displays dynamic tide flows: arrows on a chart showing the present tide stream and orientation (requires a GPS fix and an NT-MAX card)

Land submenu

Land features	<input checked="" type="checkbox"/> displays land features, for example regions, rivers, roads, railways, airports. [note the position of this option has changed from the T5380]
Land elevation	<input checked="" type="checkbox"/> displays land contours, shaded like depths (requires an NT Max card)

Other submenu

Waypoints	Displays waypoints: Hide all only displays waypoints on any selected route; Selected displays waypoints with their display option set to Icon or I+N (Icon and Name); Show all displays all waypoints (see section 5).
Names	<input checked="" type="checkbox"/> displays place names.
Lights	Light House display options: Off hides all light indicators (the icon still shows); No sectors hides sectors; On shows sectors; Animated activates light animation. Note: with light animation enabled sectors are not visible, animation only operates in single chart view or in the top chart of chart + chart
Nav-aids	Displays signals (fog, radar, radio stations) and bouys. Int and US select the icon format; Simpl draws simpler icons.
Attention areas	<input checked="" type="checkbox"/> displays attention area boundaries and information icons  , attention areas are important areas, such as restricted anchorages or shallow areas.

17-3 Setup > Sonar

Press **ENTER** once or more until the Setup menu is displayed, then select **Sonar**:



Sonar	
Frequency	200kHz
Scroll speed	Fast
Fish symbols	Off
Fish filter	Small
Fish sensitivity	Medium
Digit size	Medium
Palette	White
Interference filter	<input type="checkbox"/>
Noise filter	Off
Pulse length	Auto
Pulse power	Auto

Frequency

There is a choice of: 200 kHz, 50 kHz and Mixed. For information about selecting a suitable frequency for the water conditions, see section 8-3.

Scroll speed

Use this to set the scroll speed on the display. There is a choice of: Very Fast, Fast, Medium, Slow and Pause. The depth of the water also affects the speed of the display.

Faster scroll speeds combined with a slow boat speed (typically between 2 and 6 knots) shows the most fish detail. Medium or Slow scroll speeds result in sonar information being displayed over a longer period, but with less detail (see Section 8-2).

Fish symbols

The TRACKFISH always displays echoes from fish (fish arches, see section 8-4). If fish symbols are on, a symbol is displayed over the arch (see section 8-4). The options are:

- **Off**: No fish symbol is displayed.
- **Fun** or **Normal**: A fish symbol is displayed.
- **Fun + depth** or **Normal + depth**: A fish symbol is displayed and the depth shown beside the fish symbol.

Fish filter

Use this to select the minimum fish size that will be displayed as a fish symbol and to trigger the Fish alarm. The options are: Small, Medium and Large.

TRACKFISH 6500 Installation and Operation Manual

Fish sensitivity

Selects the minimum strength fish echo that will be displayed as a fish symbol. Higher values will display more fish symbols.

Digit size

Use this to remove or change the size of the depth display on the sonar displays. There is a choice of: Small, Medium and Large.

Palette

Use this to select a colour palette. Each colour within the palette represents a different echo strength, as shown on the sonar displays.

There is a choice of five colour palettes: Black, Blue, White, Vivid and 8 colour. The first four palettes display more detail, and each colour covers a 1.5 dB signal range. The 8 colour palette displays less detail, and each colour covers a 3 dB signal range.

Interference filter

- No filter, normal setting.
- Filters the echo signal to remove spiky interference such as engine noise or depth sounders on nearby boats.

Noise filter

Averages the echo signal to remove rapid changes. Select Medium or High to give a smoother bottom trace—this may help to detect a deeper bottom; however these settings may also remove fish echoes. Select Off for best fishfinding.

Pulse length

This can be used to specify the length of the transmitted ultrasonic pulse. A short pulse length improves the display detail but contains less energy, therefore it does not penetrate as deeply into the water as a longer pulse.

There is a choice of Auto, Short, Medium or Long. The Auto setting is recommended.


Pulse power

This can be used to specify the power output of the transmitted ultrasonic pulse. Low power output conserves the battery and produces a clear display in shallow water.

There is a choice of Auto, Low, Medium or High. The Auto setting is recommended.

17-4 Setup > GPS

Press **[MENU]** once or more until the Setup menu is displayed, then select **GPS**:

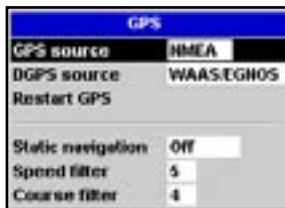

GPS Source

- **NMEA**: Use the external GPS antenna supplied or an external GPS or DGPS source connected via NMEA (see section 18-12).
- **NavBus**: Use an external GPS or DGPS source connected via NavBus (see section 18-11).

DGPS Source

Refer to section 18-5

Restart GPS

Refer to section 18-5

Static Navigation

When the boat stops or moves very slowly, the calculated GPS speed and course become erratic. Static navigation allows the erratic values to be filtered:

- 0.01 to 99.9: If the boat speed is slower than this, the speed is displayed as zero and the course stays unchanged.
- 0 (Off): The calculated speed and course are always used.

Speed and Course Filter

Waves and wind cause the boat speed and course to fluctuate slightly. To give stable readings, the TRACKFISH calculates these values by taking several measurements and averaging them.

- A low value averages measurements over a shorter period of time. This gives the most accurate value but has the most fluctuations.
- A higher value averages measurements over a longer period of time. This gives the most stable value but will ignore some [true] sudden speed changes.

Set the Speed and Course filters to the lowest values which give stable readings. The range of each filter is 1 to 60 seconds or Off (0).

17-5 Setup > Fuel

Fuel setup requires optional petrol/gasoline, diesel or SmartCraft sensors to be installed. Set Num **engines** first to enable the fuel functions.

Press **[MENU]** one or more times until the Setup menu is displayed, then select **Fuel**:



Warning

Fuel consumption can change drastically depending upon the boat loading and the sea conditions. Always carry adequate fuel for the journey, plus a reserve.

Tank full

Tells the TRACKFISH you have filled a fuel tank (see section 12-1).

Set remaining

Tells the TRACKFISH you have added or removed fuel (see section 12-1).

Clear Used

Select **Clear** used to set **Used** (the amount of fuel used) to zero. Do this to start measuring the amount of fuel used over a certain time or distance.

Tank size

Enter the capacity of the fuel tank. Navman recommends measuring tank size by draining the fuel tank, filling it to capacity and using the fuel dispenser's reading. Beware of air pockets, especially in underfloor tanks.

Num. engines

Set the number of engines to 0, 1 or 2. If 0 is selected the fuel features are turned off.

Calibrate

SmartCraft fuel sensors and Navman diesel sensors are factory calibrated and should never need recalibrating. Calibrating Navman petrol/gasoline sensors gives more accurate fuel values.

Twin engine installations require each fuel transducer to be calibrated. This can be done at the same time with two portable tanks or at different times using one portable tank.

Calibrating the fuel transducer(s) requires accurate measurement of the fuel consumption. This is best done using a small portable tank. At least 4 gallons (15 litres) of fuel should be used to ensure an accurate calibration.

It is often very difficult to fill underfloor tanks to the same level twice due to air pockets, so the more fuel used, the more accurate the calibration.

To calibrate the fuel transducer(s), perform the following steps:

1. Record the level of the fuel in the tank(s).
2. Connect the portable tank(s) to the engine through the fuel transducer(s).
3. Run the engine at normal cruising speed until at least 4 gallons (15 litres) of fuel has been used per engine.
4. Check the actual amount of fuel used per engine by refilling the portable tank(s) to the original level and noting the reading(s) from the fuel dispenser's gauge.

5. Select **Fuel**. Use the cursor keys to change the reading for each engine to match that on the fuel dispenser's gauge.
6. Press **ENT** when the reading is correct.

Note: If the fuel calibration options appear to give erroneous readings after a while, first check that the fuel sensor has been installed correctly according to the installation instructions supplied with it, then see Appendix B - Troubleshooting.

Flow filter

Most engines do not draw fuel from the tank at a steady rate. To give a stable fuel flow reading, the TRACKFISH calculates the flow value(s) by taking several measurements and averaging them. Use the Flow filter to set the period over which the fuel flow is averaged.

The Flow filter can be set from 0 to 30 seconds. Use the lowest value which gives a stable flow. Usually a value of 5 to 10 seconds will give a satisfactory result for two-stroke carburettor engines. Fuel injected or four-stroke engines may require a larger value.

This setting affects the **Fuel flow** and **Fuel economy** reading on the Fuel display but it does not affect the **Fuel used** reading.

Fuel consumption curve

See section 12-3.

Diesel sensors

If the boat has twin diesel engines and Navman diesel sensors, set up the diesel sensors:

- 1 In the fuel setup menu, select **Diesel sensors**.



- The display shows fuel flow and RPM for the two engines. Identify which line has data for the port engine; for example vary the speed of one engine or have one engine running and the other stopped.
- Press **▲** or **▼** to select the line with data for the port engine. Press **ENT**. Press **▼** to select Port and press **ENT**.
- Repeat steps 2 and 3 for the starboard engine.
- Press **ESC** when done.

Speed source

17-6 Setup > Track

Press **MENU** one or more times until the Setup menu is displayed, then select Track:

Track	
Record	1
Display	1
Plotting interval	Distance
Distance	0.1 nm
Time	10 sec
Memory used	100%
Send track	
Delete track	

Tracking records and displays the boat's course on the chart (see section 3-5). Five different tracks can be recorded: track 1 has up to 2000 points and tracks 2, 3, 4 and 5 have up to 500 points each.

Record

OFF: The TRACKFISH stops recording a track.

1 to 5 (select a track number): The TRACKFISH starts recording the boat's course into the selected track.

Display

OFF: No track is shown on the chart.

1 to 5 (select a track number): The selected track is shown on the chart.

If both paddlewheel sensor and GPS speeds are available, select the source of speed readings for fuel calculations. If there is a current or tide, these speeds and the fuel calculation results will be different.

Water speed: Use paddlewheel sensor speed (boat speed through the water). This gives a more accurate value for Economy.

GPS: Use GPS speed (boat speed relative to land). This gives a more accurate value for Range.

Plotting Interval

Select the plotting and recording interval. The options are Distance or Time.

Distance

Select the distance plotting interval: 0.01, 0.05, 0.1, 0.5, 1.0, 2.0, 5.0 or 10.0 distance units.

Time

Select the time plotting interval: 1, 5, 10 or 30 seconds or 1 minute.

Memory used

The percentage of memory used in the track being recorded.

Tip: Use the user card display to check the number of points recorded in each track (see section 14).

Send track

This option is included for compatibility with older units. For information, see your NAVMAN dealer.

Delete track

The data in the track selected for Record (see above) is deleted.

17-7 Setup > Logs

Press **ENTER** one or more times until the Setup menu is displayed, then select **Logs**:

Logs	
Reset trip dist	
Reset total dist	
Reset engine hours	
Trip dist	10.5 nm
Total dist	10.5 nm
Engine hours	0.1 hrs

The values can be reset independently of each other. These log values are saved when the unit is turned off.

Reset trip dist

This resets the trip distance to zero.

Reset total dist

This option resets the total distance to zero.

Reset engine hours

Use this option to reset the engine hours to zero. This can be useful after an engine service or to count the engine hours between service intervals.














17-8 Setup > Alarms

Press **ENTER** one or more times until the Setup menu is displayed, then select **Alarms**:

Alarms	
Arrival radius	OFF
Anchor alarm	OFF
XTE	<input type="checkbox"/>
Danger	OFF
Too shallow	OFF
Too deep	OFF
Fish	<input type="checkbox"/>
Temperature	OFF
Temperature rate	OFF
Low battery	OFF
Low fuel	OFF
DGPS	<input checked="" type="checkbox"/>

For the **XTE**, **Fish** and **Loss** of **DGPS** fix alarms, select to turn the alarm on or select to turn the alarm off. For the other alarms, enter a trigger value to turn the alarm on. The alarm will sound each time the alarm value passes the trigger value. For example, the **Danger** alarm will sound if the boat comes closer to a danger waypoint than the trigger value and the **Anchor** alarm will sound if the boat moves by more than the trigger value. To turn these alarms off, enter a trigger value of 0 (zero).

Icons for alarms that are on can be displayed in the data header (see section 2-7-3). An alarm icon is normally black and turns red when the alarm sounds.

Symbol	Alarm	Beeper	Alarm sounds when it is on and the:
	Arrival radius		boat is closer to the destination or to a waypoint than the alarm trigger value
	Anchor alarm		boat moves by more than the alarm trigger value
	XTE		boat moves off course by more than the CDI scale (see section 14-2)
	Danger		boat comes closer to a danger waypoint than the alarm trigger value
	Too shallow	1/5 sec	depth is less than the alarm trigger value
	Too deep	1/2 sec	depth is greater than the alarm trigger value
	Fish	1 short beep	echo matches the profile of a fish
	Temperature	1/2 sec	temperature equals the alarm trigger value
	Temperature rate	1/2 sec	rate of change of temperature equals the alarm trigger value
	Low battery	1/2 sec	battery voltage is less than the alarm trigger value
	Low fuel	1/2 sec	fuel remaining equals the alarm trigger value
	Loss of DGPS fix		TRACKFISH can not receive the DGPS signal (beacon, WAAS or EGNOS)
	Loss of GPS fix		TRACKFISH can not receive the GPS signal (this alarm is always on)

17-9 Setup > Units

Press **ENTER** one or more times until the Setup menu is displayed, then select **Units**:



The default units are shown above.

Distance

nm (nautical miles), mi (miles) or km (kilometres)

Speed

kn (knots), mph (miles per hour) or kph (kilometres per hour)

Depth

ft (feet), m (metres) or fa (fathoms)

Height

ft (feet) or m (metres)

Fuel

Litres, USGal (US gallons) or ImpGal (Imperial Gallons)

Compass

°T (True north) or °M (Magnetic north)

Temperature

°F (Fahrenheit) or °C (Celsius)

Wind (optional)

Requires a wind instrument: True or App (Apparent)

Note: that the units for wind speed are the speed units.

Pressure

Requires SmartCraft: kPa or psi

Baro (Barometric pressure)

Requires a Navman VHF receiver with barometer connected by NavBus: InHg or mB.

17-10 Setup > Comms

Use this feature when the TRACKFISH is connected to other NAVMAN instruments through NavBus or any compatible NMEA instrument.

Press **Menu** once or more until the Setup menu is displayed, then select Comms:



NMEA out

NMEA is generally used with third party instruments (see section 18-12). Select this to transmit NMEA sentences, for example to an autopilot.

NMEA data

Use this to specify which NMEA sentences will be transmitted (see section 18-12 and Appendix A).

Lat/lon dps

Select the number of decimal points used for latitude and longitude transmitted in NMEA sentences.

NavBus

NavBus is the preferred method for connecting the TRACKFISH to other NAVMAN instruments. Select this if the instruments are connected using NavBus.

NavBus Group

Use this when a group of NAVMAN instruments are connected together using NavBus, to specify a group of instruments for backlighting, if required. Then, if the backlight setting on one instrument in the group is adjusted, the other instruments change automatically. Otherwise, select 0. See section 18-11.

17-11 Setup > Calibrate

Press **ENT** once or more until the Setup menu is displayed, then select Calibrate:



Speed

This calibrates the speed from a paddlewheel sensor connected to the TRACKFISH.

Calibration may be required because different hull shapes have different flow characteristics. Obtain an accurate measurement of the boat's speed from a GPS receiver; or by following another boat travelling at a known speed; or by making a timed run over a known distance.

Note: for accurate calibration:

- The speed from a GPS receiver should be greater than 5 knots.
- The speed from another paddlewheel transducer should be between 5 and 20 knots.
- Best results are achieved in calm conditions where there is minimal current (best at high or low tide).

Calibrating speed:

- 1 Travel at a constant, known speed.
- 2 In the Calibrate menu, select Speed.
- 3 Press **←** or **→** to change the displayed speed to the true value.
- 4 Press **ENT**.

Speed filter

Waves and wind cause the boat speed from the paddlewheel transducer to fluctuate slightly. To give stable readings, the TRACKFISH calculates these values by taking several measurements and averaging them. Set the Speed filter to the lowest value which gives stable readings. The range is 1 to 30 seconds or Off (0).

Temperature

The factory settings should be sufficiently accurate for normal usage. To calibrate the temperature readout, first measure the water temperature with a thermometer known to be accurate.

Use the cursor keys to display the temperature readout box, then increase or decrease the value to match the measured temperature. The temperature can be set from 32° to 99.9°F (0° to 37.7°C) with a resolution of 0.1° unit.

To change the units between °F (Fahrenheit) or °C (Celsius), see section 17-9.

Temperature filter

Water turbulence and currents cause the water temperature to fluctuate slightly. To give stable readings, the TRACKFISH calculates these values by taking several measurements and averaging them. Set the Temperature filter to the lowest value which gives stable readings. The range is 1 to 30 seconds or Off (0).

Fuel

See section 17-5, Calibrate.

Keel Offset

A depth transducer measures depths below where the transducer is mounted on the boat, usually the bottom of the boat. The TRACKFISH calculates the depths to display by adding the keel offset to all measured depths.

- A Have a zero keel offset to display depths below the transducer.
- B Enter a positive keel offset to increase the displayed depth. For example to display the total depths below the surface, enter the depth of the transducer below the surface.
- C Enter a negative keel offset to decrease the displayed depth. For example, to display the depths of clear water below the boat, enter minus the depth of the deepest part of the boat below the transducer.

Speed range


The maximum reading to display on an analog boat speed gauge (see section 10). Choose a range suitable for your boat.

Max fuel flow

The maximum fuel flow from the fuel tank.

Max RPM

The maximum engine RPM. Enter a value you have attained rather than the manufacturer's value.

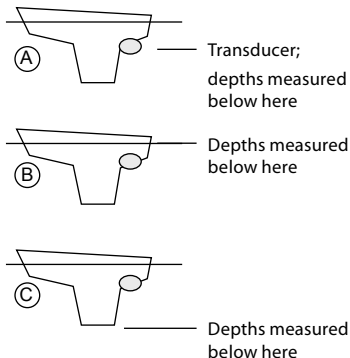

17-12 Setup > Time

Press **MENU** once or more until the Setup menu is displayed, then select Time:

Time	
Local offset	+08:30
Time format	24 hour
Date format	dd/MM/yy

Local offset

The difference between local time and UTC (GMT). Change local offset when daylight saving time starts and ends. The range is 0 to \pm 13 hours, in 30 minute steps.

- 1 Select Local offset.
- 2 Press **▲** or **▼** to change the offset, then press **ENT**.

Time format

The options are 24 hour or 12 hour.

Date format

The options are dd/MM/yy, MMM/dd/yy, dd/MM/yy or MM/dd/yy.

17-13 Setup > Favourites

Press **MENU** once or more until the Setup menu is displayed, then select Favourites.

Favourites	
Favourite 1	Chart
Favourite 2	Sonar
Favourite 3	Chart + Sonar
Favourite 4	None
Favourite 5	None
Favourite 6	None

The favourites are used by the **PAGE** key (see section 2-7-2).

The first three favourites are preset to Chart, Sonar and Chart + sonar, and can not be altered. To select a display for Favourite 4, 5 or 6:

- 1 Select the favourite to set.
- 2 A list of choices is displayed. Select one.

17-14 Setup > Simulate

Simulate mode is a way of becoming familiar with the TRACKFISH (see section 2-6).

Press **F10** once or more until the Setup menu is displayed, then select Simulate:



Simulate

- Turn simulate mode off
- Turn simulate mode on

Warning: Never have simulate mode on when the TRACKFISH is navigating on the water.

Mode

There are two choices for Mode:

1 Normal

Simulates the boat moving from the selected start point at the given speed and heading. The options required for Normal are:

- Speed: The simulated boat speed to use.
- Course: The simulated course over ground.

Note: To select the start point, go to the chart display before starting the simulation. Then:

- To start the simulation from the boat position, press **ESC** to switch to centre on boat mode.
- To start the simulation from a different point, move the cursor to that point on the chart.

Tip: To calculate a course, use the cursor (see section 3-3).

Tip: As the boat moves, vary Course to simulate the boat moving off course.

2 Demo

Simulates a boat moving along a route and automatically displays different TRACKFISH functions. The options required for Demo are:












- Speed: The simulated boat speed to use.
- Route: The route to follow.

18 Installation

Correct installation is critical to the performance of the unit. It is vital to read the entire installation section of this manual

and the documentation that comes with the antenna and any other units before starting installation.

18-1 Installation: What comes with the TRACKFISH

TRACKFISH display unit, with a holder for plug-in cards and blanking cap for fuel connector.	
Dust cover for display unit	
Power cable	
Mounting bracket (screws included)	
GPS connection cable	
Warranty registration card	
Navman 1240 GPS antenna	
Flush mounting kit	
Dual frequency transom sonar transducer (includes cable kit and screws)	
Transom Mount Transducer Installation Manual	
Full Instruction Manual CD*	

18-2 Installation: Options and Accessories

- Replacement paddle wheel
- C-MAP™ NT-MAX, NT+ or NT chart cards.
- C-MAP™ user cards (3 V) for storing data. (The older 5 volt cards are not supported)
- NAVMAN carry bag.
- NAVMAN NavBus junction boxes simplify wiring, particularly if several instruments are connected. For more information, see the *NavBus Installation Manual*.

Optional sensors and instruments

External alarms: Lights or sounders in the boat to sound alarms through the boat (see section 18-4).

GPS or DGPS antenna: For GPS navigation, see section 18-5.

Sonar transducer: For depth sounding and fish finding, see section 18-6.

Fuel sensors: For fuel functions. The TRACKFISH can use these optional fuel flow sensors, fitted to one or two engines:

- Navman petrol/gasoline sensors (see section 18-7) Note: a Y cable is required for any fuel kit.

- Navman diesel sensors (see section 18-8)
- SmartCraft fuel sensors (see section 18-10)


DSC VHF radio: Tracks other boats with GPS receivers and DSC radios and displays barometric pressure (see section 18-9).

SmartCraft: With one or two SmartCraft capable Mercury petrol/gasoline engines, the TRACKFISH can display engine data and trim and can control troll speed (see section 18-10).

Other instruments: The TRACKFISH can receive data from other instruments and send data to other instruments by NavBus or NMEA (see sections 18-11 and 18-12).

Please consult your NAVMAN dealer for more information.

Connections

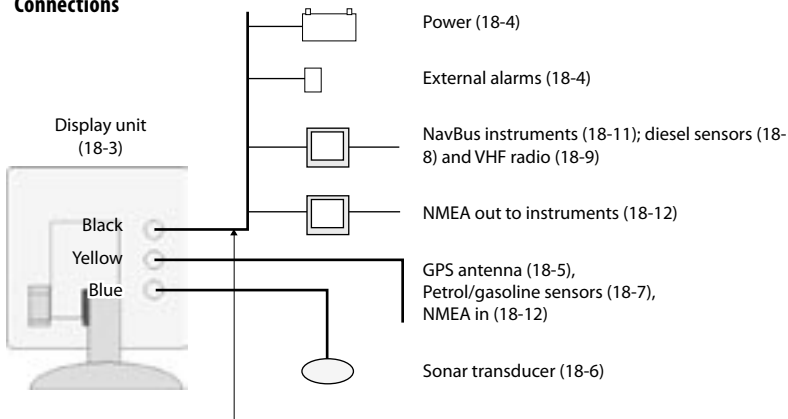

Power/data cable

Pin	Wire	Function
1	Black	Ground: - power in, NMEA ground. (The cable has two black wires which are connected inside the cable and it does not matter which black wire you use)
2	Brown	Power out, 9V DC (not used)
3	White	NMEA out
4	Blue	NavBus-
5	Red	+ power in, 10.5 to 30.5 V DC
6	Orange	NavBus+
7	Yellow	Auto power in
8	Green	External alarm out, 30 V DC 200 mA maximum.

18-3 Installation: The display unit

Select a position for the display unit:

- At least 4" (100 mm) away from the compass, at least 12" (300 mm) away from any radio transmitter and at least 4 ft (1.2 m) away from any antenna.
- Easy to read and operate. If possible, mount the display unit in front of the navigator or to the right of the navigator because the LCD display is more readable from these positions.

- Not exposed to the direct sun or water and protected from physical damage during rough sea passages.
- Easy to access the power source and convenient to route the transducer cables.

There are two mounting arrangements:

1 Flush Mounting

Requires a solid panel with access behind for wiring and mounting screws. After flush mounting, the display unit cannot be tilted or moved after installation to reduce any unwanted glare or reflections. Carefully select the best viewing position before installation. This would generally be in a shaded area.

- 1 Cut a hole in the bulkhead for the display unit using the flush mount template.
- 2 Drill four holes for the mounting studs using the flush mount template.
- 3 Screw the four studs into the brass inserts in the back of the display unit.
- 4 Sit the display unit in place and fit the washers and nuts to the studs.



2 Bracket Mounting

Requires a panel for mounting the bracket. Ensure that the panel is not likely to deform and is not subject to excessive vibration. The bracket can be tilted and rotated. The display unit can be removed when it is not in use.

- 1 Hold the bracket in place and mark the screw holes.
- 2 Drill the screw holes and screw the bracket in place. Do not overtighten the screws or the display unit might not rotate.
- 3 Hold the display unit in place on the mounting bracket shaft. Hand tighten the knob on the mounting bracket.




18-4 Installation: Power/data cable

The power/data cable has a black locking collar and flying leads.


- 1 Wire the TRACKFISH for auto power to have the TRACKFISH turn on with the boat's ignition switch or to record engine hours or if the TRACKFISH must add up the total fuel used (for example if Navman petrol/gasoline fuel sensors are installed or if SmartCraft is installed without fuel tank level sensors). Otherwise wire for basic power (for more information, see section 2-2).

Basic power

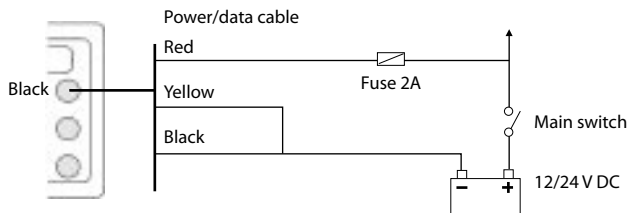


Auto power

During setup, set up `Auto power off` (see sections 2-2 and 17-1)

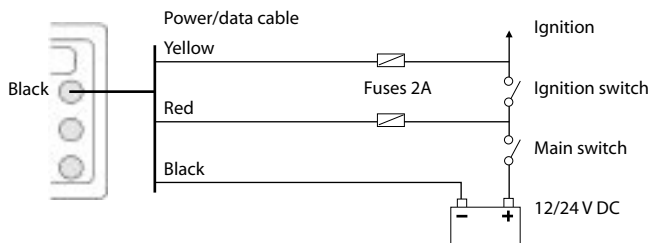

- 2 Wire any external alarm beepers or lights. The alarm output switches to ground to sound the alarm. If the current is more than 200 mA, fit a relay.
- 3 Connect the power/data cable to the black display unit connector; turn the collar to lock the connector.

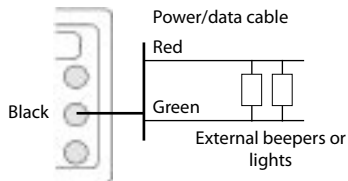

18-5 Installation: GPS antenna

Selecting an antenna

Fit one of these GPS antennas:

- Normally use the GPS antenna supplied.
- An optional differential beacon DGPS antenna to give enhanced accuracy within range of land based differential beacons in areas where WAAS or EGNOS are not available. Such a DGPS antenna has both a GPS receiver and a beacon receiver, and it automatically applies the beacon correction to the GPS position.
- A compatible GPS or DGPS instrument or antenna connected by NavBus (see section 18-11) or NMEA (see section 18-12). In this case, the TRACKFISH does not need its own antenna.

Note:

- The TRACKFISH can apply the WAAS and EGNOS DGPS corrections to any GPS antenna.
- To configure the TRACKFISH for different antenna options, see section 17-4.

For more information, contact your NAVMAN dealer.

To set the DGPS options of NONE or WAAS/EGNOS:

Remove the Y cable (if connected) and connect the GPS directly to the yellow input. Set the option. See section 17-4. The new setting will be displayed if it was successfully applied.


To restart the GPS:

Remove the Y cable (if connected) and connect the GPS directly to the yellow input and select restart, see section 17-5.


Installing an antenna

If an external antenna is required, install the antenna and fit the antenna cable back to the display unit. Follow the instructions in the manual supplied with the antenna. Fit an optional Navman extension cable if required.

If a SmartCraft system or Navman petrol/gasoline sensors are fitted as well, fit a Y cable:

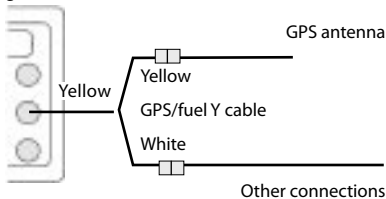

Otherwise:

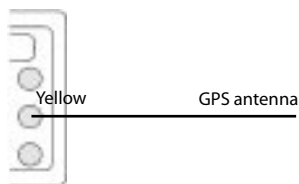


During setup, configure the TRACKFISH for the chosen antenna, see section 17-4.

18-6 Installation: Sonar transducer

Either:

- Fit the transom mount sonar transducer supplied, following the instructions in the Transom Mount Transducer Installation Manual supplied with the TRACKFISH.
- For enhanced performance, fit an optional through hull dual frequency sonar transducer and through hull speed/temperature transducer. Contact the nearest NAVMAN dealer for more information.

Connect the transducer to the blue TRACKFISH connector; tighten the locking collar.

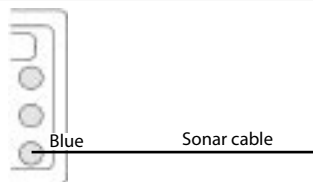

During setup

- a set Sonar to (see section 17-1)
- b set up the sonar options (see section 17-3)

18-7 Installation: Navman petrol/gasoline sensors


Fit the optional petrol/gasoline fuel kit following the instructions supplied with the kit.

Note:

- SmartCraft engines have fuel flow sensors, therefore Navman fuel sensors are not required as well.
- For dual engines, fit two kits.
- Wire the TRACKFISH for auto power (see section 18-4).
- An optional GPS/fuel Y cable is required.

During setup:

- a set Y cable to and set up Auto power off (see sections 2-2 and 17-1)
- b set the fuel data (see section 17-5)

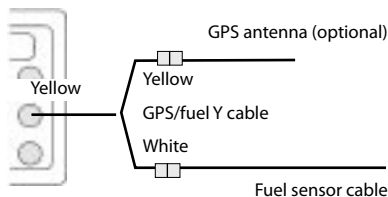


18-8 Installation: Navman diesel sensors

Fit the optional diesel fuel kit following the instructions supplied with the kit. Note:

- SmartCraft engines have fuel flow sensors, therefore Navman diesel sensors are not required as well.
- For dual engines, fit two kits. Wire the two diesel flow sensor cables in parallel.
- Normally, power the diesel sensors from the boat ignition switch. Then the TRACKFISH does not need to be wired for auto power (see section 18-4).

During setup:


- a set NavBus to (see section 17-10)
- b set the fuel data (see section 17-5)

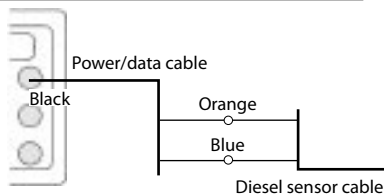

18-9 Installation: DSC VHF radio

Fit and set up the optional Navman DSC VHF radio following the instructions supplied with the radio. During setup:

- a on the radio, enter buddy boats required
- b on the TRACKFISH, set NavBus to (see section 17-10)

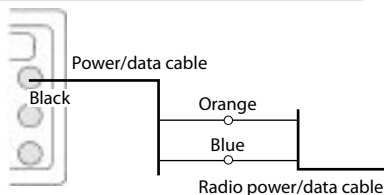


18-10 Installation: SmartCraft

If the boat has one or two SmartCraft capable Mercury petrol/gasoline engines, connect the TRACKFISH to the SmartCraft engines with an optional SmartCraft gateway. The display unit can display engine data and trim and can control troll speed.

Note:

- Fit a single gateway for single engines and a dual gateway for dual engines.
- SmartCraft engines have fuel flow sensors, therefore Navman fuel sensors are not required as well.
- An optional GPS/fuel Y cable is required.
- If the fuel tank does not have SmartCraft level sensors, wire for auto power (see section 18-4).

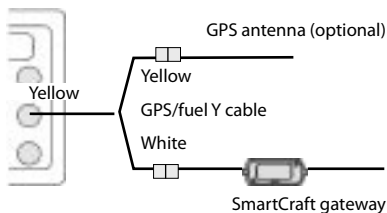

During setup, set Y cable to (see section 17-1) and enter the SmartCraft setup data. For information on installing, setting up and using SmartCraft, see the *SmartCraft Gateways Installation and Operation Manual*.

18-11 Installation: Other NavBus instruments


NavBus is Navman's system for connecting instruments together to interchange data and share transducers. When instruments are connected by NavBus:

- If the units, alarms or calibration are changed in one instrument, then the values will automatically change in all other instruments of the same type.
- Each instrument can be assigned to a group of instruments. If the backlight is changed in an instrument in group 1, 2, 3 or 4 then the backlight will automatically change in the other instruments in the same group. If the backlight is changed in an instrument in group 0 then no other instruments are affected.
- If an alarm sounds, mute it by clearing the alarm on any instrument which can display that alarm.

NavBus and the TRACKFISH

The TRACKFISH can:

- Display wind speed and direction from an optional Navman Wind instrument
- Receive and display depth from an optional Navman depth instrument.
- Receive and display boat speed and water temperature from a paddlewheel sensor on an optional Speed instrument.

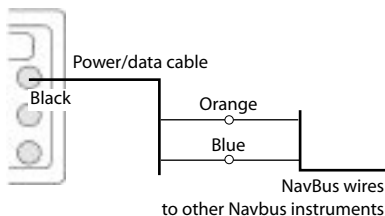

- Receive barometric pressure from an optional Navman VHF radio. The TRACKFISH can display:
 - Baro:** barometric pressure
 - Baro history:** barometer history
 - Weather:** a predication, based on changes in barometric pressure
 - Fish forecaster:** a prediction based on changes in barometric pressure
- Receive data from an optional GPS or GPS/DGPS source.
- Send data to optional NAVMAN instruments, for example to a repeater.

During setup for NavBus instruments, set NavBus to and assign the instrument a NavBus group number (see section 17-10)

18-12 Installation: Other NMEA instruments


NMEA is an industry standard for interconnecting instruments. It is not as flexible or as easy to install as NavBus.

The TRACKFISH can:

- Receive and display wind speed and direction from an optional compatible wind instrument.
- Receive and display depth, paddlewheel boat speed and water temperature from an optional compatible instrument.
- Receive data from an optional compatible GPS or GPS/DGPS source.
- Send GPS position and other navigation data to an autopilot or other instrument. An autopilot requires APB, APA and VTG sentences (see section 17-10).


For information on sending NMEA data to the TRACKFISH, see your Navman dealer.

During setup to send NMEA data to other instruments, set **NMEA out** to and specify the **NMEA data** to send (see section 17-10).

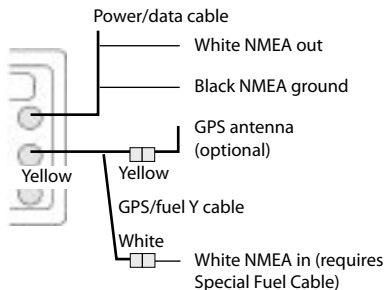

18-13 Installation: Setup and test

Setup and test

- 1 Put a blanking cap on any unused connector on the back of the display unit. Ensure all connectors are plugged in and the display unit is in place.
- 2 If the display unit is bracket mounted, adjust tilt and rotation for best viewing and hand tighten the knob.
- 3 Insert any required C-MAP chart card (see section 1-3).
- 4 Turn the instrument on (see section 2-2). When the TRACKFISH is turned on for the first time, it displays an installation menu:
 - i Select the language to use.
 - ii Change the data if necessary (see section 2-1)
 - iii When the setup data is correct, press .
- 5 Enter setup data to set up the TRACKFISH to your requirements and to set up any optional sensors or instruments (see section 17).
- 6 At the satellite display, check that it picks up GPS satellites. Wait for the GPS receiver to start up and the fix type to change from 'Acquiring' to 'GPS fix'. This should take less than two minutes (see section 7).
- 7 Go on a test run to check that the navigation equipment works correctly, particularly when a radio transmitter or radar is used.

This data can be changed later (see section 17).

Appendix A - Specifications

GENERAL

Size: 150mm (5.90") H x 164mm (6.46") W x 64.4mm (2.56") D.

Display: 127mm (5") diagonal, TFT colour, 234 x 320 pixels.

Backlight: Display and keys

Supply voltage
10.5 to 30.5 V DC.

Supply current: at 13.8 V
350 mA min - no backlighting.
1 A max - full backlighting.]

External beeper or light output: Switched to ground to sound alarm, 30 V DC, 200 mA maximum.

Operating temperature
0° to 50°C (32° to 122°F)

ALARMS:

- User set: Arrival radius, anchor, XTE, danger, too shallow, too deep, fish, temperature, temperature rate, low battery, low fuel (optional), loss of DGPS fix

GPS NAVIGATION

Chart card: C-MAP™ NT-MAX, NT+ or NT

User card: 3.3 V C-MAP™

Waypoints: Up to 3000, with default or user-defined alphanumeric names up to eight characters.

Routes: 25 Routes, with up to 50 points each

Tracks: By time or distance, one track of 2000 points and four of 500 points.

Chart datums

- 121 Chart datums (see next page)
- One user-defined map shift.

Chart scale: 0.05 to 4096 nm for chart (chart dependent) down to 0.01 nm in plotter mode.

SONAR FISHFINDING

Depth range:
0.6 m (2 ft) to 1000 m (3300 ft)

Sonar output:

- Power: Variable, up to 600 W RMS
- Dual frequency: 50 khz and 200 khz

Transom transducer cable length:
10 m (33 ft)

Depth acquisition time from startup:

Typically 2 seconds at 30 m (100 ft)

Temperature:

- Range 0° to 37.7°C (32° to 99.9°F)
- Resolution of 0.1° unit.

Speed (from paddlewheel transducer):
1 to 96.6 kph (57.5 mph, 50 kn).

FUEL COMPUTER

(Optional fuel sensor(s) required)

Engine types:

- Outboard carburetted two stroke and EFI petrol/gasoline engines: 50 to 300 hp.
- Outboard four stroke petrol/gasoline engines: 90 to 300 hp.
- Inboard petrol/gasoline engines: 70 to 400 hp.

Flow rate:

- Minimum: 5 litres per hour (1.3 U.S. gallons per hour).
- Maximum: 130 litres per hour (34 U.S. gallons per hour).

COMMUNICATIONS

NavBus

Connection to other NAVMAN instruments.

NMEA


- NMEA 0183 ver 2 4800 baud
- Inputs from compatible instruments: BWR, DPT, GGA, GLL, GSA, GSV, HDG, HDM, HDT, MTW, MWV, RMC, VHW, VTG and DBT
- Outputs, for compatible instruments: APA, APB, BWR, DBT, DPT, GGA, GLL, GSA, GSV, RMB, RMC, MTW, VHW, VLW, VTG, XTE

STANDARDS COMPLIANCE

EMC:

- USA: FCC Part 15 Class B.
- Europe: (CE) EN64000-6-1 and EN64000-6-3
- New Zealand and Australia: (C Tick) AS-NZS 3548.

Environment: IPx6/IPx7/CFR46 (with card holder and connections in place)

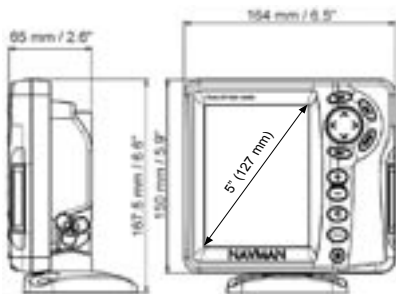

List of datums

Adindan	Afgooye	AIN EL ABD 1970
American Samoa 1962	Anna 1 Astro 1965	Antigua Island Astro 1943
ARC 1950	ARC 1960	Ascension Island 1958
Astro Beacon 'E' 1945	Astro DOS 71/4	Astro Station 1952
Astro Tern Island (Frig) 1961	Australian Geodetic 1966	Australian Geodetic 1984
Ayabelle Lighthouse	Bellevue (IGN)	Bermuda 1957
Bissau	Bogota Observatory	Bukit Rimpah
Camp Area Astro	Campo Inchauspe 1969	Canton Astro 1966
Cape	Cape Canaveral	Carthage
Chatham Island Astro 1971	Chua Astro	Co-ord. Sys.1937 Estonia
Corrego Alegre	Dabola	Deception Island
Djakarta (Batavia)	DOS 1968	Easter Island 1967
European 1950	European 1979	Fort Thomas 1955
Gan 1970	Geodetic Datum 1949	Graciosa Base Sw 1948
Guam 1963	Gunung Segara	GUX 1 Astro
Herat North	Hermannskogel	Hjorsey 1955
Hong Kong 1963	Hu-Tzu-Shan	Indian
Indian 1954	Indian 1960	Indian 1975
Indonesian 1974	Ireland 1965	ISTS 061 Astro 1968
ISTS 073 Astro 1969	Johnston Island 1961	Kandawala
Kerguelen Island 1949	Kertau 1948	Kusaie Astro 1951
L. C. 5 Astro 1961	Leigon	Liberia 1964
Luzon	M'Poraloko	Mahe 1971
Massawa	Merchich	Midway Astro 1961
Minna	Montserrat Island Astro 1958	Nahrwan Masirah Is. Oman
Nahrwan United Arab Emirates	Nahrwan Saudi Arabia	Naparima, BWI
North American 1927	North American 1983	North Sahara 1959
Observatorio Meteorolog. 1939	Old Egyptian 1907	Old Hawaiian
Oman	Ord. Survey Great Britain 1936	Pico de las Nieves
Pitcairn Astro 1967	Point 58	Pointe Noire 1948
Porto Santo 1936	Provis. South American 1956	Provis. South Chilean 1963
Puerto Rico	Pulkovo 1942	Qatar National
Qornoq	Reunion	Rome 1940
S-42 (Pulkovo 1942)	Santo (DOS) 1965	Sao Braz
Sapper Hill 1943	Schwarzeck	Selvagem Grande 1938
Sierra Leone 1960	S-JTSK	South American 1969
South Asia	Tananarive Observatory 1925	Timbalai 1948
Tokyo	Tristan Astro 1968	Viti Levu 1916
Voirol 1874	Voirol 1960	Wake Island Astro 1952
Wake-Eniwetok 1960	WGS 84	Yacare
Zanderij		

Appendix B - Troubleshooting

This troubleshooting guide is written with the assumption that the user has read and understood the relevant sections in this manual.

It is possible in many cases to solve difficulties without having to send the display unit back to the manufacturer for repair. Please follow this troubleshooting section before contacting the nearest NAVMAN dealer.

There are no user serviceable parts. Specialized methods and testing equipment are required to ensure that the display unit is reassembled

correctly and is waterproof. Users who service the product themselves will void the warranty.

Repairs to the product may only be carried out by a service centre approved by NAVMAN. If the product must be sent into a service centre for repair, it is essential to send in the transducer(s) at the same time.

More information can be found on our Website: www.navman.com.

B-1 General problems

1-1 The TRACKFISH won't turn on:

- a The TRACKFISH is designed to operate on a 12/24 volt battery system, where the voltage may vary from 10.5 to 30.5 volts. If an excessive voltage is supplied, a fuse will be tripped, turning the display unit off. Check the fuse.
- b Check that the power cable connector at the back of the display unit is securely plugged in and the collar is locked in place. The collar must be secure for watertight connection.
- c Measure the battery voltage while the battery is under load - turn on some lights, radio or other electrical equipment connected to the battery. If the voltage is less than 10 volts:
 - the battery terminals or wiring on the terminals may be corroded.
 - the battery may not be charging correctly or may need replacing.
- d Inspect the power cable from end to end for damage such as cuts, breaks, squashed or trapped sections.
- e Check power wiring (see section 18-4).
- f Check for corrosion on the power cable connector and clean or replace if required.
- g Check fuses that are placed in line with the power cable. A fuse can be blown despite appearing to be good or the fuse may be corroded. Test the fuse or replace it with a fuse known to be good.

1-2 The TRACKFISH won't turn off:

The TRACKFISH may have been wired for Auto power. In this case, the TRACKFISH cannot be turned off while the ignition power is on (see section 2-2).

1-3 If the TRACKFISH beeps when turned on but nothing is displayed:

The TRACKFISH may be operating, but the backlight settings may have been set too low (see section 2-3).

1-4 The wrong language is displayed:

See section 17-1.

B-2 GPS navigation problems

2-1 No GPS fix or long time to get fix at startup:

- May occur occasionally if the antenna does not have a clear view of the sky. The satellite positions are constantly changing.
- Antenna cable not connected to display unit.


2-2 TRACKFISH GPS position different from true position by more than 10 m (33 ft):

- TRACKFISH in simulate mode. Turn simulate mode off (see section 17-14).
- The normal error in GPS position will exceed 10 m (33 ft) for about 5% of the time.
- Under special circumstances the US Department of Defence may introduce a deliberate and changing error in the GPS positions of up to 300 m (1000 ft).

2-3 TRACKFISH position different from same position on local charts:

- TRACKFISH in simulate mode. Turn simulate mode off (see section 17-14).
- Incorrect chart datum. Select the correct chart datum (see section 17-2).
- Map shift has been applied wrongly. Clear map shift, then reapply if necessary (see section 17-2).

2-4 Can not see boat on chart:

- Press  to switch to centre on boat mode (see section 3-2-1).

B-3 Fuel consumption problems

3-1 Fuel used or remaining seem inaccurate:

- TRACKFISH is not wired for auto power (see section 18-4).
- In rough seas, fuel may surge back and forth through the fuel transducer, resulting in incorrect readings. Try installing a one-way valve between the fuel transducer and the fuel tank.
- The `Set remaining` fuel value must be reset after every refuelling (see section 12-1).
- The fuel tank may not refill to the same capacity each time due to air pockets.

2-5 The time or date on satellite display is wrong or off:

- No GPS fix.
- In simulate mode. Turn simulate mode off (see section 17-14).
- Local time offset is wrong (see section 17-12). The Local Time Offset must be changed when daylight saving time starts or ends.

2-6 Autopilot not responding to TRACKFISH; no NMEA output:

- NMEA output disabled or the required NMEA sentences are not turned on. Check NMEA settings (see section 17-10).
- Check that the instrument is connected correctly.

2-7 No DGPS fix or loss of DGPS fix:

- To receive a DGPS fix, WAAS/EGNOS must be enabled or an optional DGPS antenna fitted (see section 7).
- With WAAS/EGNOS: Boat out of coverage area (see section 7).
- With WAAS: GPS antenna does not have a clear view of the horizon towards the equator.
- With beacon DGPS: boat out of range of a DGPS beacon.

This is particularly noticable with underfloor tanks.

- Fuel transducers wear out over time and should be replaced after every 5000 litres of fuel.

3-2 Flow indicates no fuel or low fuel:

- Check that the number of engines is set to 1 (see section 17-5).
- Check that the fuel cable connectors are securely plugged in and the collar is locked in place. The collar must be locked in place to give a watertight connection.

- c A fuel transducer may be clogged. If so, remove the transducer from the fuel line and gently blow through it in the opposite direction to the fuel flow.

A fuel filter between the fuel transducer and the fuel tank must be installed as per the fuel installation guide. Failure to do so will void the warranty.

- d Inspect the fuel cable from end to end for damage such as cuts, breaks, trapped or squashed sections.
- e Check that the fuel filter is clean.

3-3 A twin engine installation shows only one flow rate:

- a Check that the number of engines is set to 2 (see section 17-5).

3-4 Erratic Fuel Flow readings:

- a The fuel flow transducer may have been mounted too close to the fuel pump or may be subject to excessive vibration. Refer to the installation instructions supplied with the fuel transducer.
- b Check for leaks in the fuel line or in the fuel pickup in the tank.
- c The *Flow filter* value is not suitable for the engine. Check that the value is not set to zero, then try increasing the value until a steady flow rate is shown (see section 17-5).

3-5 There is no reading for fuel economy:

- a The boat must be travelling through the water to generate an *Economy* reading.
- b Check that the paddlewheel on the transducer is spinning freely and that the two magnets in the paddlewheel are still in place.

B-4 Sonar fishfinding problems

4-1 The TRACKFISH operates erratically:

- a Check that the transducer does not have debris (e.g. weed, plastic bag) caught around it.
- b The transducer may have been damaged during launching, running aground or while underway with debris etc. If the transducer has been impacted, it may have been kicked up on the bracket. If it is not physically damaged, reset the transducer back to its original position. (See the *Transom Transducer Installation Guide*.)
- c When the transducer is less than 2 ft (0.6 m) from the bottom, the depth readings may become inconsistent and erratic.
- d Manual Gain may be set too low, which may cause weak bottom echo or no fish signals. If in Manual Gain, try increasing the Gain.
- e Ensure the back of the bottom surface of the transducer is slightly lower than the front and the front is as deep in the water as possible in order to minimize the generation of bubbles through cavitation. (See the *Transom Transducers Installation Guide*)

- f Check the transducer and power cable connectors at the back of the display unit are securely plugged in and the collars are locked in place. The collars must be secure for watertight connection.
- g Inspect the power cable from end to end for damage such as cuts, breaks, squashed or trapped sections.
- h Ensure there is not another fishfinder or depth sounder turned on, which may interfere with this TRACKFISH.
- i Electrical noise from the boat's engine or an accessory may be interfering with the transducer(s) and/or the TRACKFISH. This may cause the TRACKFISH to automatically decrease the Gain unless using Manual Gain.

The TRACKFISH thus eliminates weaker signals such as fish or even the bottom from the display. This may be checked by switching off other instruments, accessories (e.g. bilge pump) and the motor until the offending device is located. To stop problems from electrical noise, try:

- re-routing the power and transducer cable(s) away from the boat's other electrical wiring.
- routing the display unit's power cable directly to the battery with an in-line fuse.

4-2 Bottom is not displayed:

- a The TRACKFISH may have Manual Range selected and the depth may be outside the range value selected. Either change the TRACKFISH to Auto Range or select another depth range (see section 8-5).
- b The depth may be outside the TRACKFISH's range. While in Auto Range, the display unit will display "--." to indicate that there is no bottom detected. A display of the bottom should reappear when in shallower water.

4-3 The bottom is displayed too far up the screen:

The TRACKFISH may have Manual Range selected and the selected Range value is too high for the depth. Either change the TRACKFISH to Auto Range or select another depth range (see section 8-5)

4-4 Bottom echo disappears or erratic digital reading while the boat is moving:

- a Ensure the back of the bottom surface of the transducer is slightly lower than the front and the front is as deep in the water as possible in order to minimise the generation of bubbles through cavitation. (See the *Transom Transducers Installation Guide*, for more information.)
- b The transducer may be in turbulent water. Air bubbles in the water disrupt the echoes returned, interfering with the TRACKFISH's ability to find the bottom or other targets. This often happens when the boat is reversed. The transducer must be mounted in a smooth flow of water in order for the TRACKFISH to work at all boat speeds.
- c Electrical noise from the boat's motor can interfere with the TRACKFISH. Try some suppression spark plugs.

4-5 There is a double bottom trace displayed:

- a The boat may be in an area that generates shadows (see section 8-2).
- b In shallow water, the echoes may bounce. Reduce the gain setting (see section 8-6) and/or reduce the sonar pulse power (see section 17-3).
- c Decrease the Range.

Appendix C - Glossary and navigation data

Glossary


Attention Area - An important area on a chart, such as a restricted anchorage or a shallow area (see section 17-2).

Bathymetric line - A depth contour line on the chart.

Chart card - A plug-in card that stores chart data for a region (see section 1-3).

C-MAP™ chart card - See Chart card.

C-MAP™ user card - See User card.

Cursor - A  symbol on the display (see section 3-2).

DGPS - Differential Global Positioning System. A navigation tool based on GPS with some errors corrected (see section 7).

Goto - A simple way of navigating straight to a waypoint or to the cursor position (see section 3-1).

GPS - Global Positioning System. A satellite-based navigation tool (see section 7).

Leg - The straight segments of a route between waypoints. A route with four waypoints has three legs.

MOB - Man overboard.

MOB function - Starts navigating back to the place where someone fell overboard (see section 2-4).

NavBus - A way of connecting NAVMAN instruments together to share data (see section 18-11).

NMEA - National Marine Electronics Association.

NMEA 0183 - A standard for interfacing marine electronic devices (see section 18-12).

Route: Two or more waypoints linked in sequence to form a course for the boat (see section 6).

User card - A plug-in card that stores waypoints, routes and tracks (see section 1-2).

UTC - Universal Time Coordinated or Coordinated Universal Time, which is a standard world time, formerly called Greenwich Mean Time (GMT).

Waypoint - A position that you can set on the TRACKFISH chart, for example a fishing spot or a point on a route (see section 5).

Navigation data

The boat is sailing from the start to the destination and has moved off the plotted course from the start to the destination.

BRG Bearing to Destination: Bearing to the destination from the boat.

+BRG Bearing to cursor: Bearing to cursor from boat (cursor mode, see section 3-2-1 [note the -1 added there])

CDI Course Deviation Indicator: When the boat is navigating to a point, the chart and highway displays show a parallel line on either side of the plotted course. These two lines are called the Course Deviation Indicator (CDI) lines. The distance from the plotted course to a CDI line is the CDI scale.

Set the CDI scale (see section 17-2) to the maximum distance that the boat should deviate from the plotted course. The chart and highway displays show the CDI lines, which are like a highway over the water where the boat will move. The displays show how far the boat has deviated from the plotted course and if the boat is approaching a CDI line. If the XTE alarm is enabled (see section 17-8) an alarm will sound if the boat reaches a CDI line.

COG Course Over Ground: Direction in which the boat is moving over the ground.

CTS Course To Steer: Optimum course to steer to return to the plotted course.

DTG Distance To Go: Distance from the boat to the destination.

ETA Expected Time of Arrival: At the destination, assuming that SOG and COG remain constant.

+DST Distance from boat to cursor (cursor mode, see section 3-2)



SOG Speed Over Ground: Current boat speed over the ground. This is not necessarily the same as the boat speed through the water nor the speed at which it is approaching the destination.

STR Steering: The difference between COG and CTS.

TTG Time To Go: The estimated time to reach the destination.

XTE Cross Track Error: The distance from the boat to the nearest point of the plotted course. XTE may have a letter: R means steer to the right to return to the plotted course, L means steer to the left.

VMG Velocity Made Good: The speed at which the boat is approaching the destination.

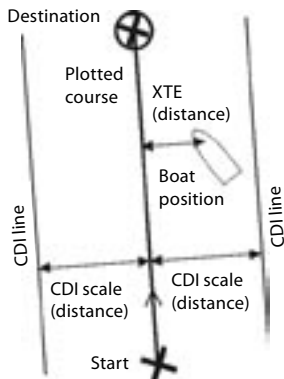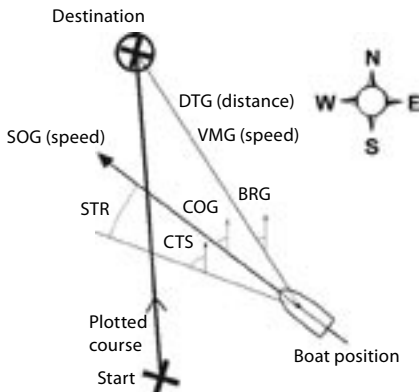

Made in New Zealand
MN000388B

Lon 174° 44.535 E

Lat 36° 48.404'S



TRACKFISH 6500

NAVMAN

FC  CE